


(Driver)

Item	Description	Qty
A	Front Lift Brackets	2
B	Rear Lift Brackets	2


A

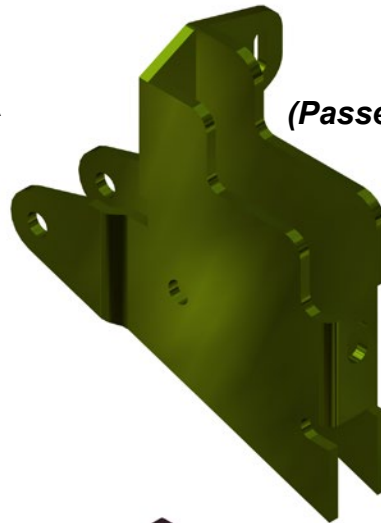

(Passenger)



B

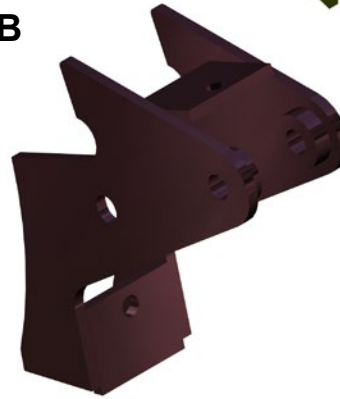

(kit contents continue on following page)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*



Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.





Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

(kit contents continued)

Item	Description	Qty
C	M10-1.5 x 55mm Lg. HHCS	2
D	M10-1.5 x 65mm Lg. HHCS	2
E	M8-1.25 x 25mm Lg. HHCS	4
F	M6-1.0 x 25mm Lg. HHCS	2
G	M10-1.5 Nylock Nuts	6
H	M8 Flat Washers	2
J	M8-1.25 Nylock Nuts	2
K	M8-1.25 Clip Nuts	2
L	M6 Flat Washers	4
M	M6-1.0 Nylock Nuts	2
N	M10-1.5 x 70mm Lg. HHCS	2

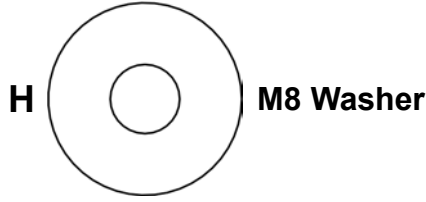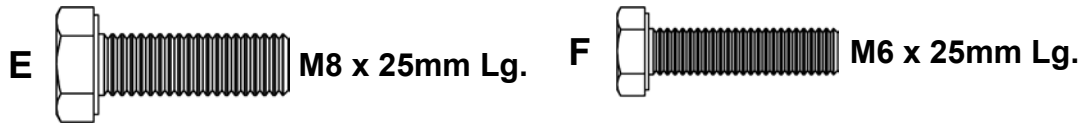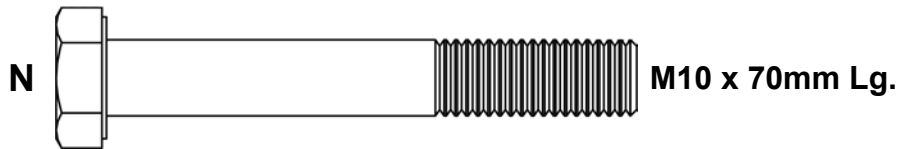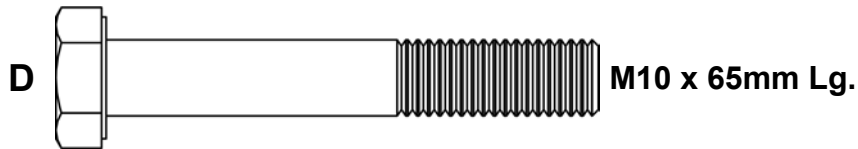

IMPORTANT! For Commander X Models:

Disconnect Front Sway Bar from Lower A-Arms before beginning installation. Reconnect when installation is complete and machine is on ground.

Do not tighten hardware completely unless noted.




FRONT

1. Raise front of machine off ground and secure with jack stands. Remove Wheels.
2. Remove Upper Shock Mount Bolts and Pull Shocks away. See Fig. 1.
3. Remove one end of Air Filter Hose and move. See Fig. 1.
4. Install Front Lift Bracket (A) using (1) each M8-1.25 x 25mm Lg. HHCS (E), M8 Flat Washer (H), and M8-1.25 Nylock Nut (J) into center hole. See Fig. 2.
5. Install stock hardware removed in Step 2 through Frame and Front Lift Bracket (A). See Fig. 2.
6. Install M6-1.25 x 25mm Lg. HHCS (F), (2) M6 Flat Washers (L), and M6-1.0 Nylock Nut (M). See Fig. 2.
7. Reinstall Shock using M10-1.5 x 55mm Lg. HHCS (C) and M10-1.5 Nylock Nut (G). See Fig. 2.
8. Reconnect Air Filter Hose. See Fig. 3.
9. Repeat steps for opposite side and tighten all hardware securely.

PARTS REFERENCE

Item	Description
A	Front Lift Brackets
B	Rear Lift Brackets
C	M10-1.5 x 55mm Lg. HHCS
D	M10-1.5 x 65mm Lg. HHCS
E	M8-1.25 x 25mm Lg. HHCS
F	M6-1.0 x 25mm Lg. HHCS
G	M10-1.5 Nylock Nuts
H	M8 Flat Washers
J	M8-1.25 Nylock Nuts
K	M8-1.25 Clip Nuts
L	M6 Flat Washers
M	M6-1.0 Nylock Nuts
N	M10-1.5 x 70mm Lg. HHCS

(Passenger side shown in illustrations)

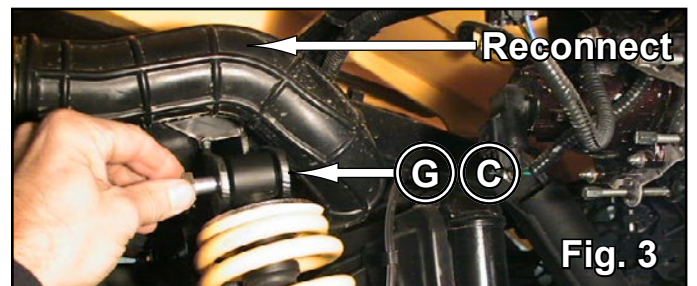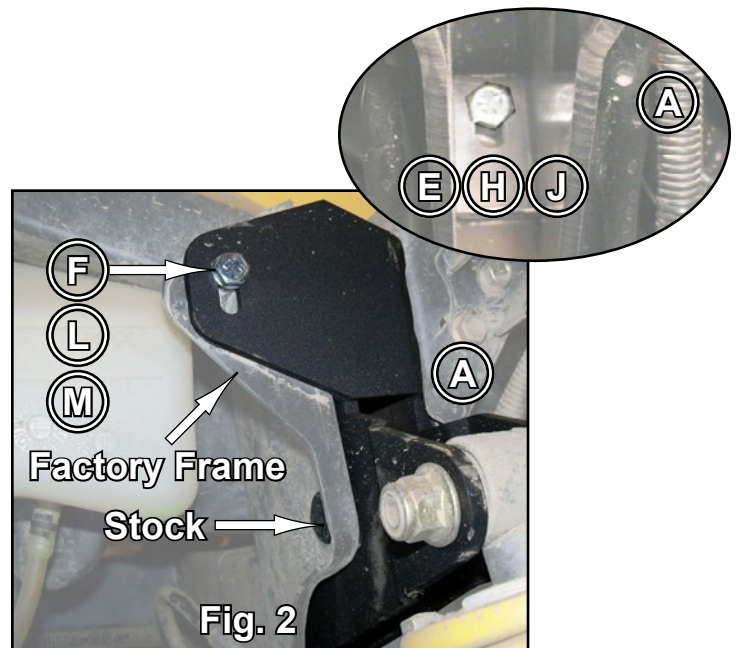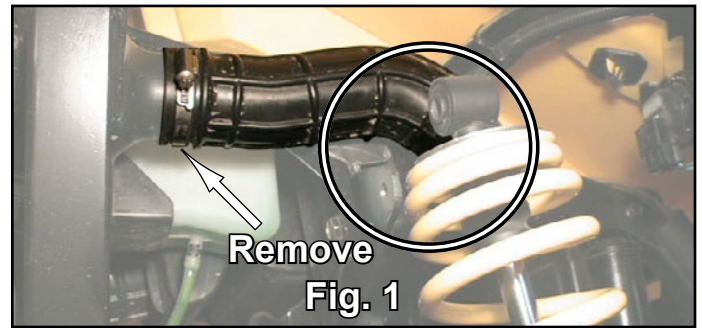

Do not tighten hardware completely unless noted.

REAR

1. Raise rear of machine off ground and secure with jack stands. Remove Wheels, Shocks, and Bed Stops.
2. Install Clip Nut (K). See Fig. 4.
3. Install Rear Lift Bracket (B) using (1) each M8-1.25 x 25mm Lg. HHCS (E), M10-1.5 x 65mm Lg. HHCS (D), and M10-1.5 Nylock Nut (G). See Fig. 5.
4. Reinstall Bed Stop. See Fig. 5.
5. Reinstall Shock into Rear Lift Bracket (B) using (1) each M10-1.5 x 70mm Lg. HHCS (N) and M10-1.5 Nylock Nut (G). See Fig. 6.
6. Repeat steps for opposite side and tighten all hardware securely.

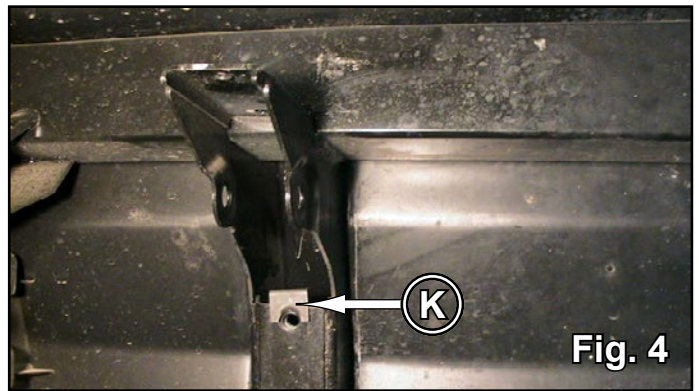


Fig. 4

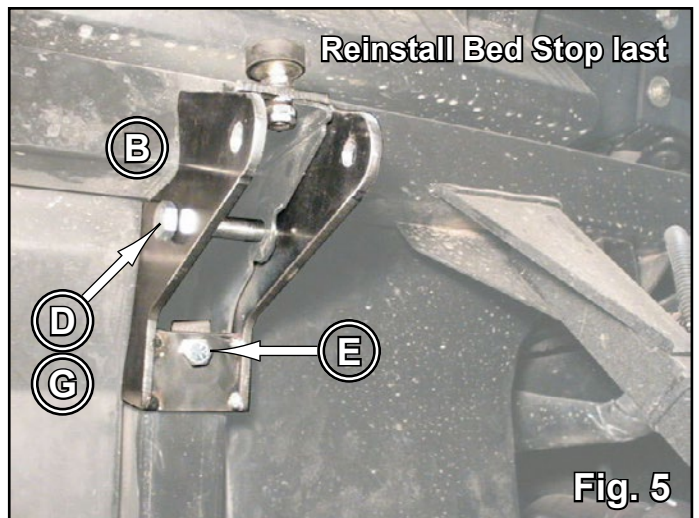


Fig. 5

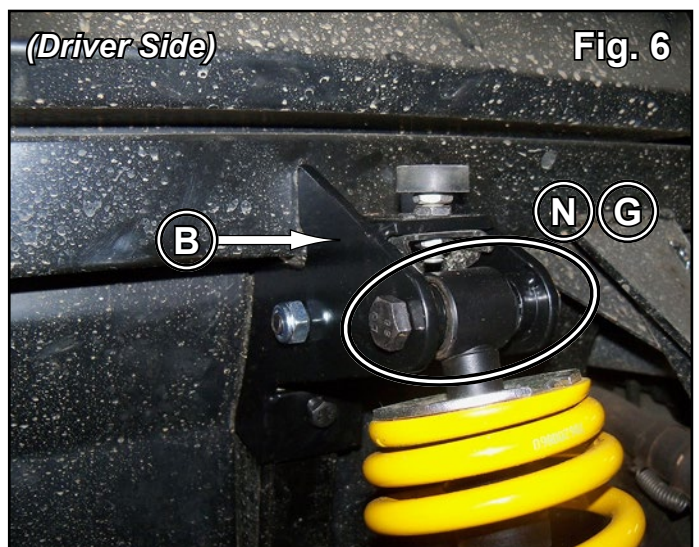


Fig. 6

PARTS REFERENCE

Item	Description
A	Front Lift Brackets
B	Rear Lift Brackets
C	M10-1.5 x 55mm Lg. HHCS
D	M10-1.5 x 65mm Lg. HHCS
E	M8-1.25 x 25mm Lg. HHCS
F	M6-1.0 x 25mm Lg. HHCS
G	M10-1.5 Nylock Nuts
H	M8 Flat Washers
J	M8-1.25 Nylock Nuts
K	M8-1.25 Clip Nuts
L	M6 Flat Washers
M	M6-1.0 Nylock Nuts
N	M10-1.5 x 70mm Lg. HHCS



Installed