


## INSTALLATION INSTRUCTIONS

### Polaris Ranger XP 2" Lift Kit

2005-2008 Models

Item	Description	Qty
A	Strut Adapters	2
B	3/8" Flat Washers	8
C	3/8"-16 Nylock Nuts	4
D	Adapter Screws	2
E	Spacers	2
F	Rear Brackets	4
G	3/8"-16 x 3" Lg. HHCS	4

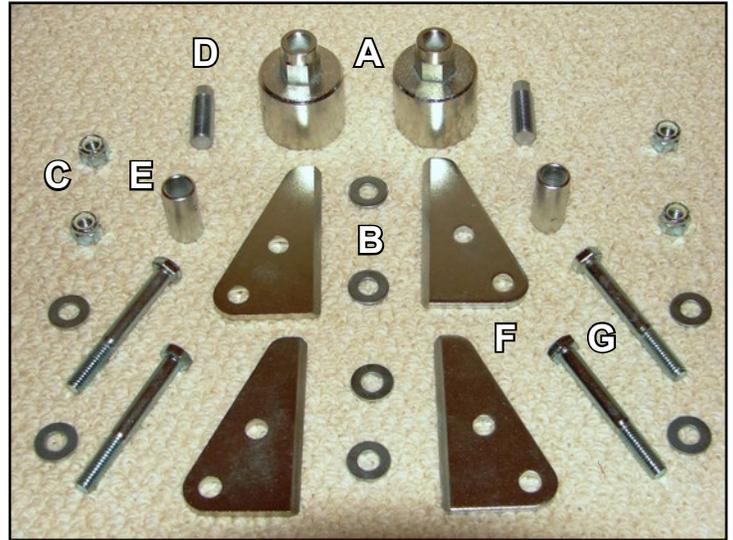

This product is designed, and manufactured, to gain additional ground clearance on utility vehicles and to be used at slower speeds on level terrains. Installation of this product increases angle of Axles which may result in frequency of required maintenance and parts wear. It is recommend that wider Tires or Wheel Spacers be used, in conjunction, with this kit to improve stability.

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th  
8:00am - 7:00pm EST Friday  
9:00am - 2:00pm EST Saturday

*Thank You  
For Choosing*

# SUPERATV.COM

#### Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

## FRONT

1. Raise ATV off ground, secure on jack stands, and remove Wheels. *CAUTION: Axle, on some models, can come out of lower CV Joint if raised to high.*
2. Remove Locknut, from top of Strut Assembly, Washer, and Plastic Bearing; pull top of Strut out from Frame.
3. Remove round, top plastic Bearing from Strut.
4. Screw Strut Adapter (A) to top of Strut and tighten. See Fig. 1.
5. Replace round, top plastic Bearing on top of Strut Adapter (A).
6. Place Strut Assembly back in frame and install Adapter Screw (D) and tighten. See Fig. 1.
7. Reinstall Washer, Plastic Bearing, and Locknut.
8. Repeat for opposite side.
9. Reinstall Wheels and ensure that hardware is tightened completely.

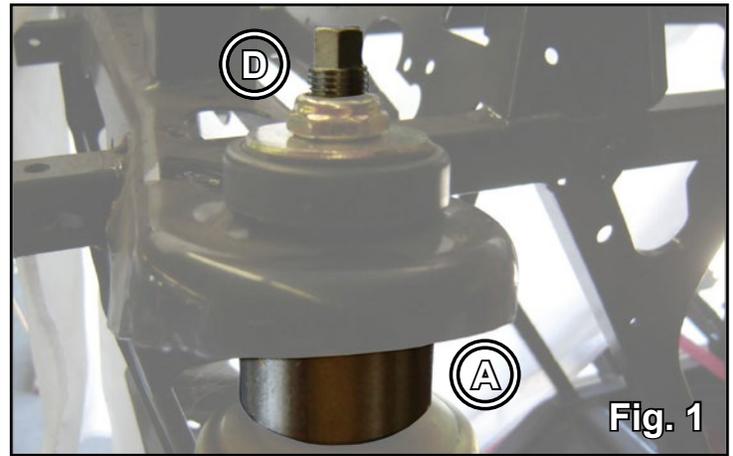


Fig. 1

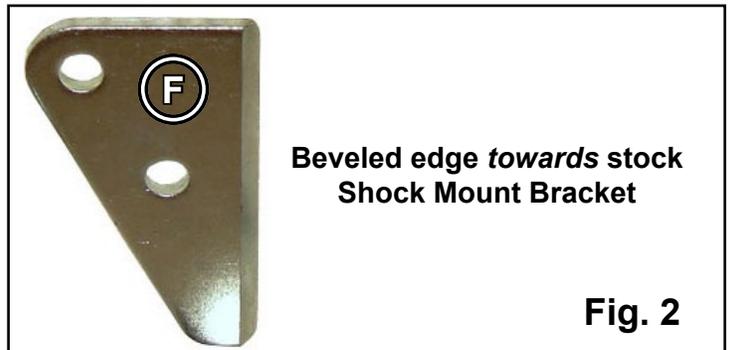


Fig. 2

## REAR

1. Raise ATV off ground, secure on jack stands, and remove Wheels.
2. Remove Lower Shock Bolt. Keep for reuse.
3. Install (2) Rear Brackets (F) to stock Shock Mounting Brackets. Secure with (1) 3/8"-16 x 3" Lg. HHCS (G), (2) 3/8" Flat Washers (B), (1) Spacer (E), and (1) 3/8"-16 Nylock Nut. See Fig. 2, Fig. 2a, and Fig. 2b.
4. Reinstall Shock with stock hardware. Use 3/8" Flat Washers (B) to take up space between Rear Brackets (F) and Shock. New hardware is included to replace stock hardware at installers discretion.
5. Repeat for opposite side.
6. Reinstall Wheels and ensure that hardware is tightened completely.

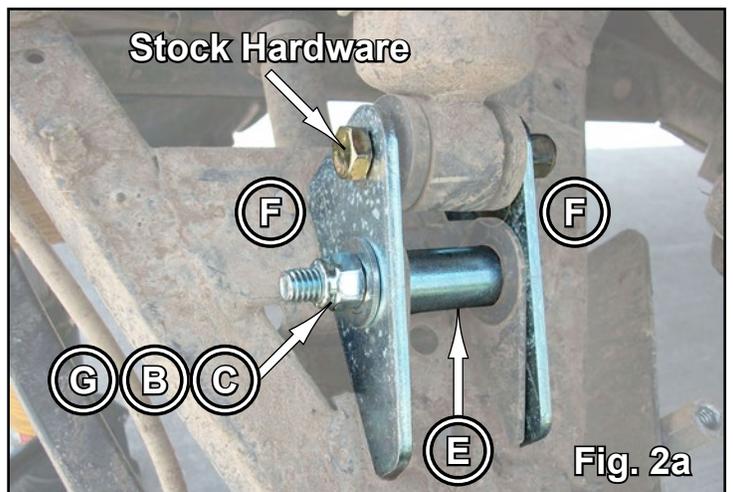


Fig. 2a

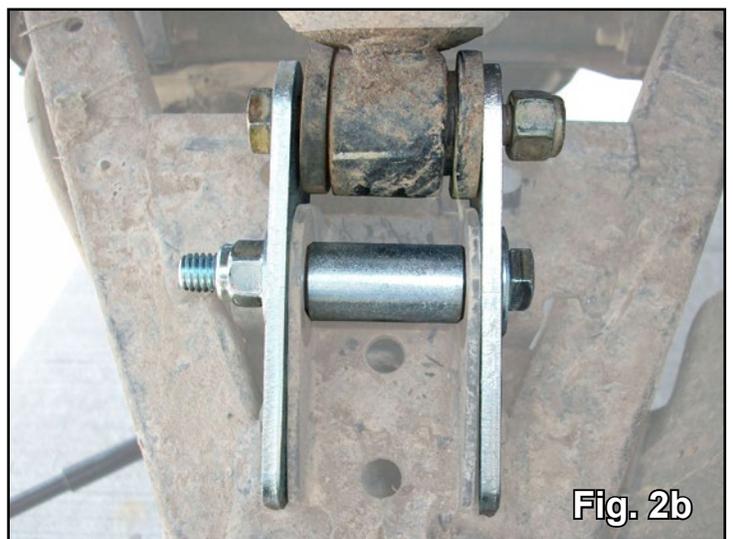


Fig. 2b

## PARTS REFERENCE

Item	Description
A	Strut Adapters
B	3/8" Flat Washers
C	3/8"-16 Nylock Nuts
D	Adapter Screws
E	Spacers
F	Rear Brackets
G	3/8"-16 x 3" Lg. HHCS