


**INSTALLATION INSTRUCTIONS**  
**Utility Jug Mount: for Polaris Ranger<sup>®</sup> XP 1000 / General<sup>™</sup>**

**! CAUTION !**

**THIS CONTAINER IS NOT DESIGNED, INTENDED OR SAFE FOR THE TRANSPORT OR STORAGE OF FUEL OR DRINKING WATER.**

- Utility Jug is not included.
- 3 Gallon installation shown.
- Installation performed on Polaris Ranger<sup>®</sup>
- Do not discard packaging until product has been successfully installed.

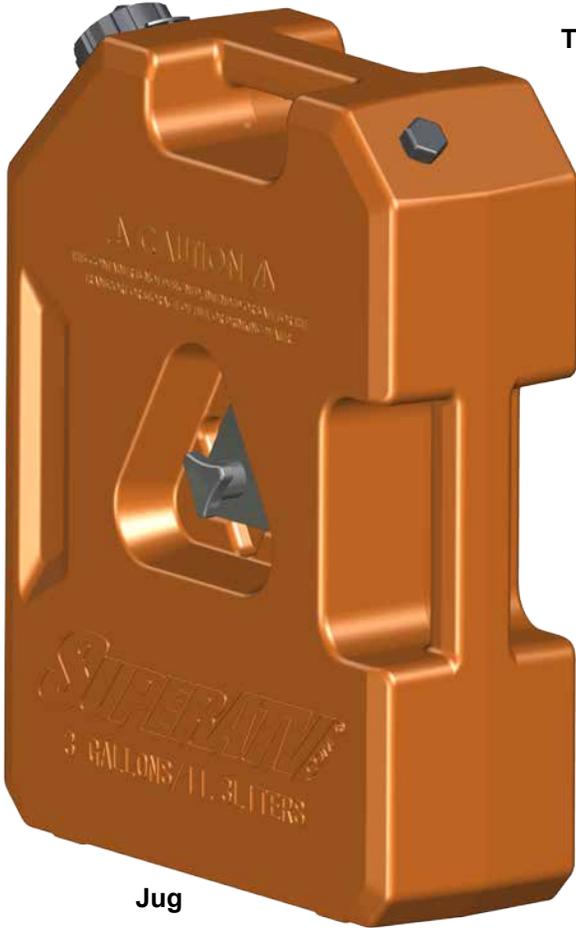

**Jug**




**Foam**



**Tie Down x 2**



**Bracket**

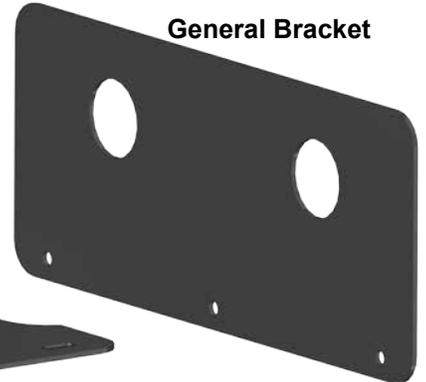

**General Bracket**

**Need help with your installation?**

✉ sales@superatv.com    🌐 www.superatv.com

☎ 1-855-743-3427    🕒 8:00am - 8:00pm EST M-Th  
 8:00am - 7:00pm EST Friday  
 9:00am - 2:00pm EST Saturday

*Read instructions and view illustrations before beginning.*

*Thank You  
 For Choosing*  
**SUPERATV**.COM<sup>®</sup>

**Liability Statement**

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.


Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.

- Separate Knob and Mount from Jug.




- Install Foam to Bracket in locations shown.

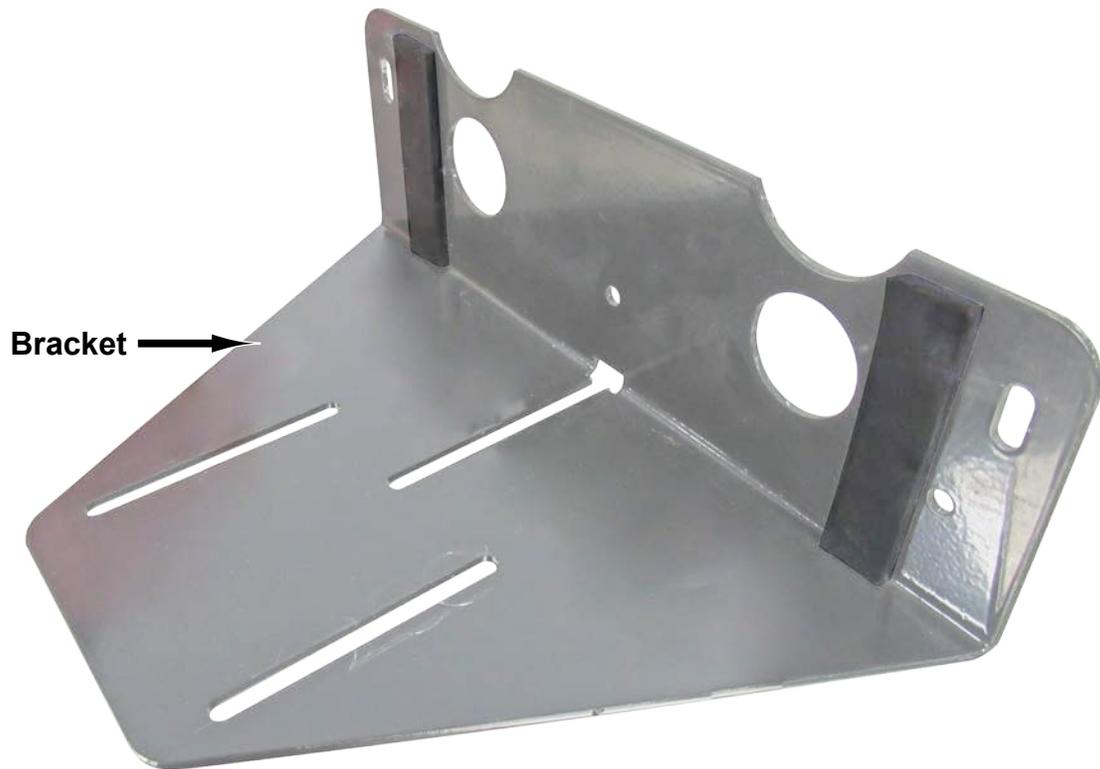


### General Bracket installation

- Install Foam to Bracket in locations shown.

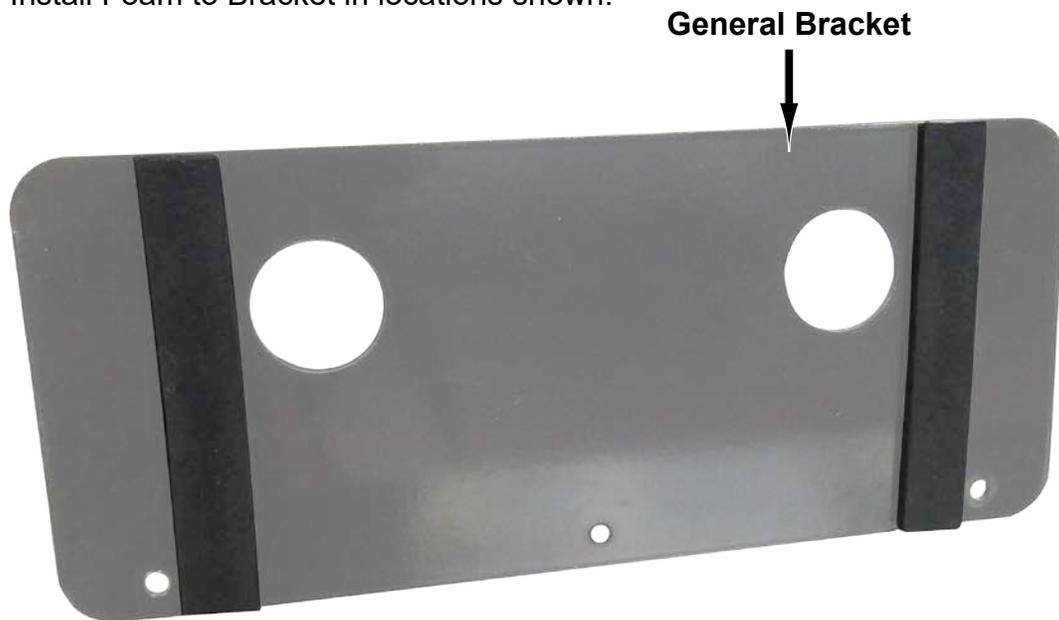


- Foam will rest against Cargo Box when securing to machine.

- Secure Mount to Bracket.
- Hardware included with Mount.
- Hardware should be snug.

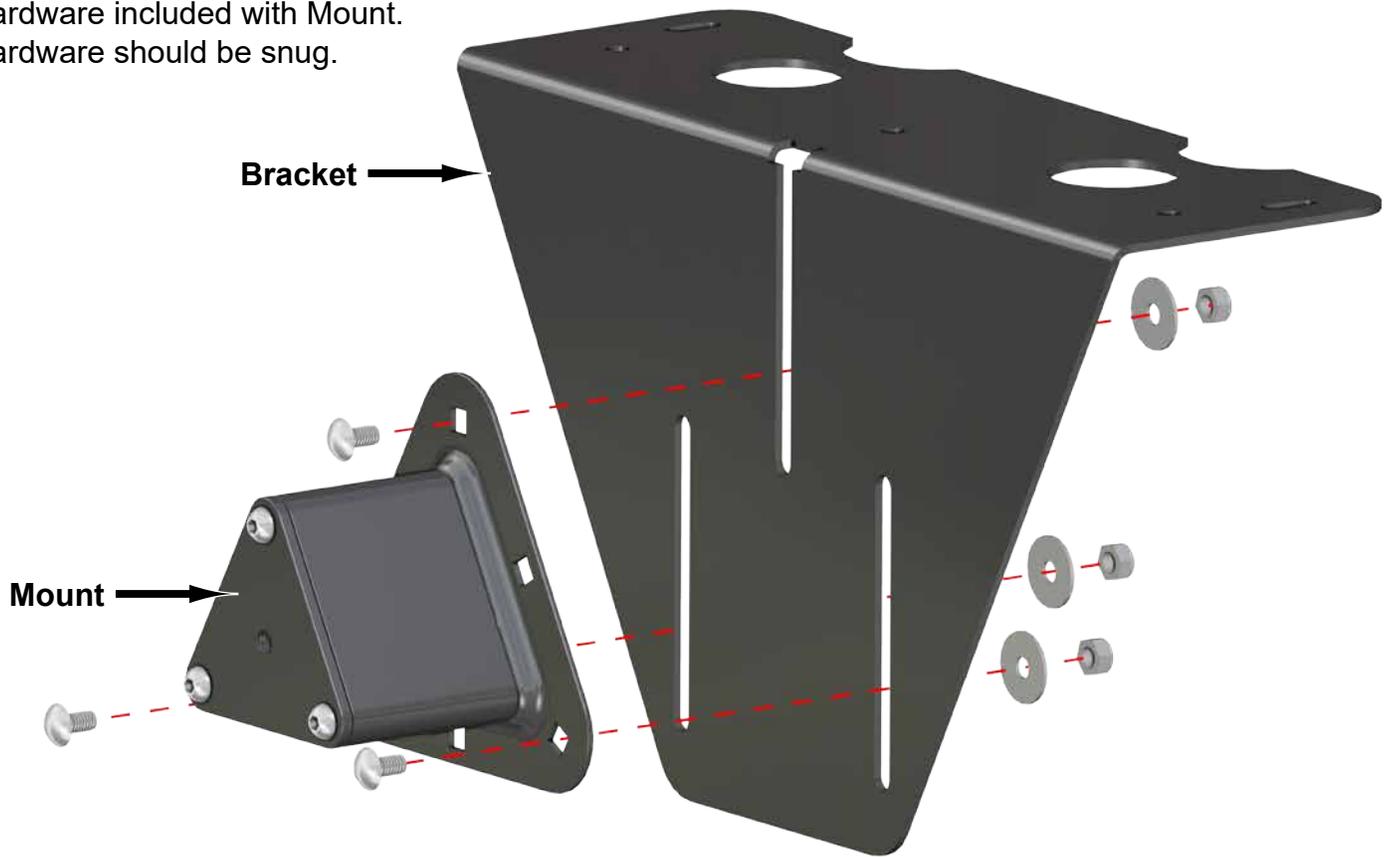


### General Bracket installation

- Secure General Bracket to Bracket with hardware shown.
- Tighten hardware.

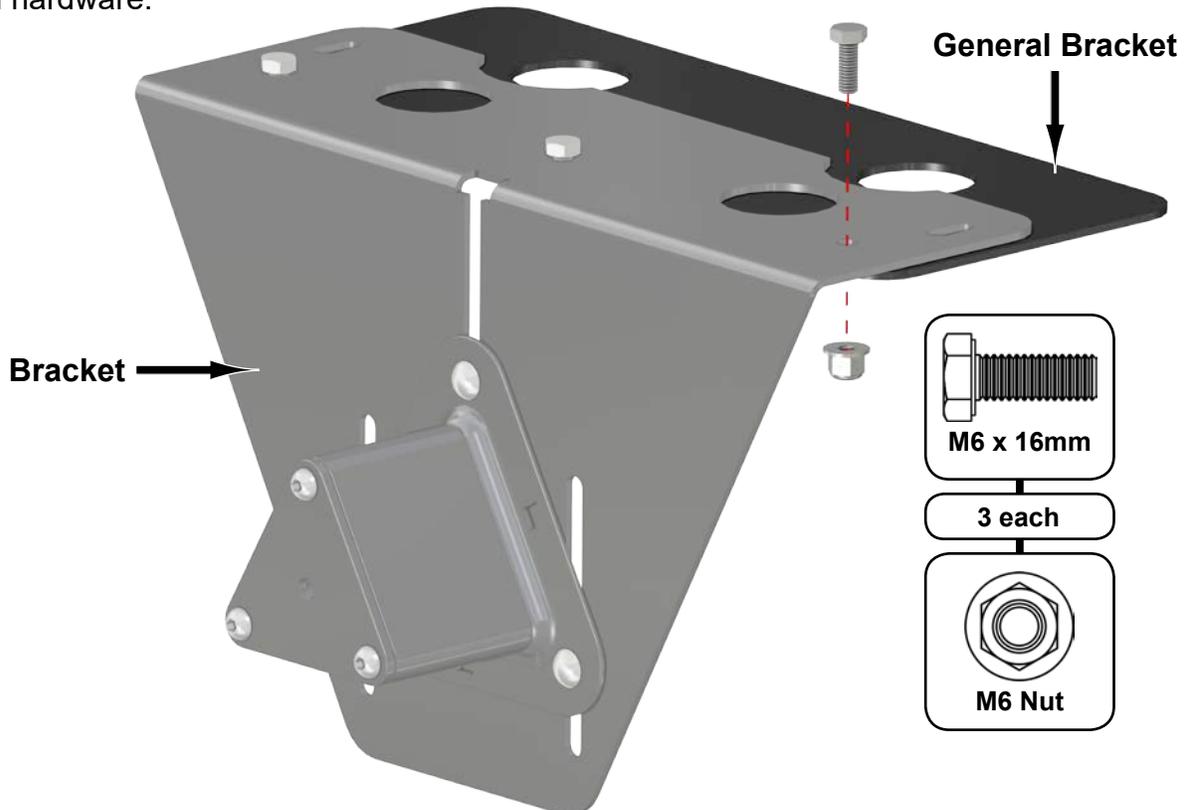

- Insert Tie Downs into Bracket.

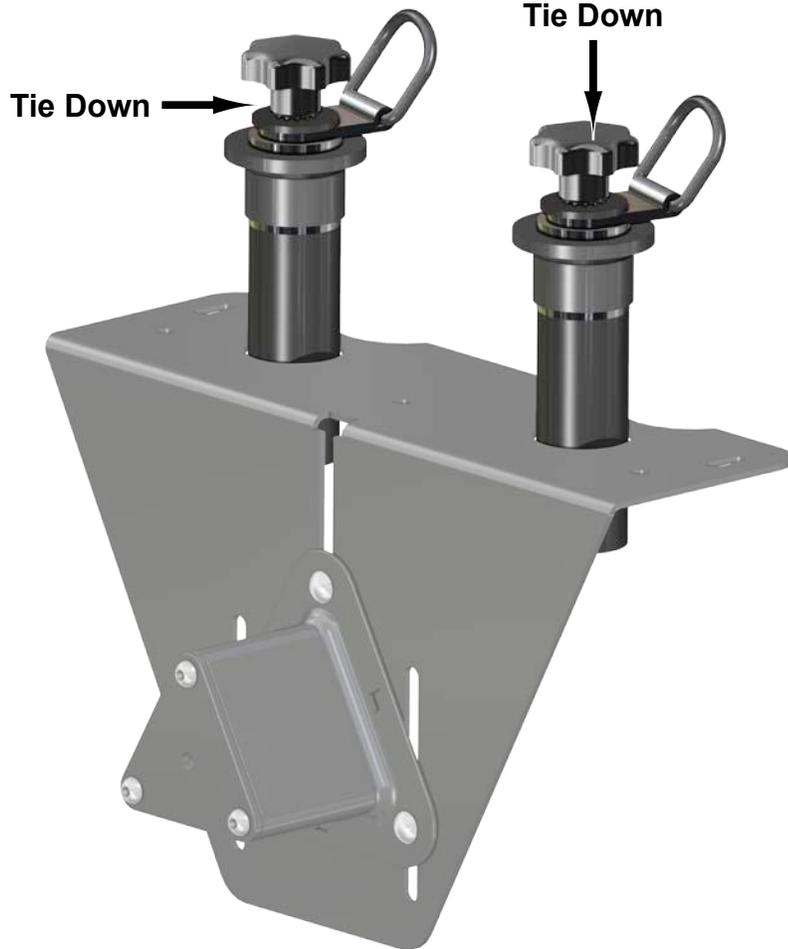

- Place Bracket into desired holes in Cargo Box. Do not tighten Tie Downs.



Jug must be empty when performing following steps:

- Place Jug onto Mount.
- Position Mount and Jug so that Jug sets flat on Cargo Box floor.
- Remove Jug from Mount.
- Remove Bracket from Cargo Box and tighten Mount hardware.
- Reinstall Bracket to Cargo Box and tighten Tie Downs.



- Secure Jug to Mount with previously removed Knob.

**Knob must lock into Jug in one of two positions shown**

