




Item	Description	Qty
A	M10-1.5 x 20mm Lg. Hex Flange Screws	4
B	M10-1.5 x 20mm Lg. Hex Flange Nylock Nuts	2
C	M10-1.5 x 25mm Lg. Socket Head Screws	2
D	M10-1.5 Nylock Nuts	2
E	M8-1.25 x 25mm Lg. Socket Head Screws	2
F	M8 Flat Washers	4
G	M8 Lock Washers	2
H	M8-1.25 Nuts	2
J	M6-1.0 x 20mm Lg. HHCS	8
K	M6 Flat Washers	16
L	M6-1.0 Nylock Nuts	8
M	Winch Mount Plate	1
N	Stock Bumper 3500 Fairlead Plate	1
P	SuperATV 3500 Fairlead Plate	1
Q	SuperATV 4500 Fairlead Plate	1
R	M10 Flat Washers	4

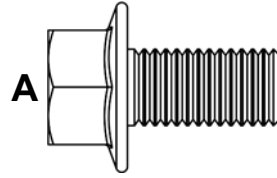


A M10 x 20mm Lg. FHCS

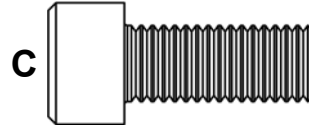

 C M10 x 25 mm Lg. SHCS



E M8 x 25mm Lg. Socket Head

 


J M6 x 20mm Lg. HHCS



H M8 Nut




L M6 Nylock Nut

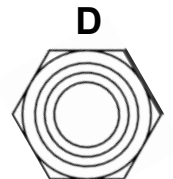


D M10 Nylock Nut


Winch not included; shown for illustration only

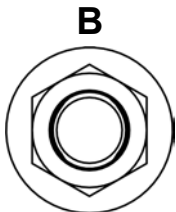


B M10 Nylock Nut (Flange)

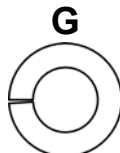


G M8 Lock Washer

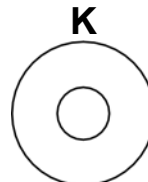

K M6 Flat Washer

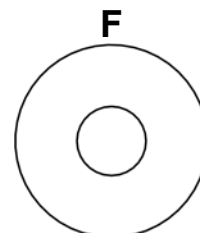

F M8 Flat Washer

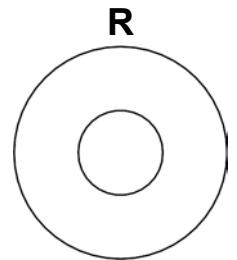

R M10 Flat Washer

(Kit Contents continue on following page)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You

For Choosing

Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.


Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

(Kit Contents continued)

Item	Description	Qty
M	Winch Mount Plate	1
N	Stock Bumper 3500 Fairlead Plate	1
P	SuperATV 3500 Fairlead Plate	1
Q	SuperATV 4500 Fairlead Plate	1


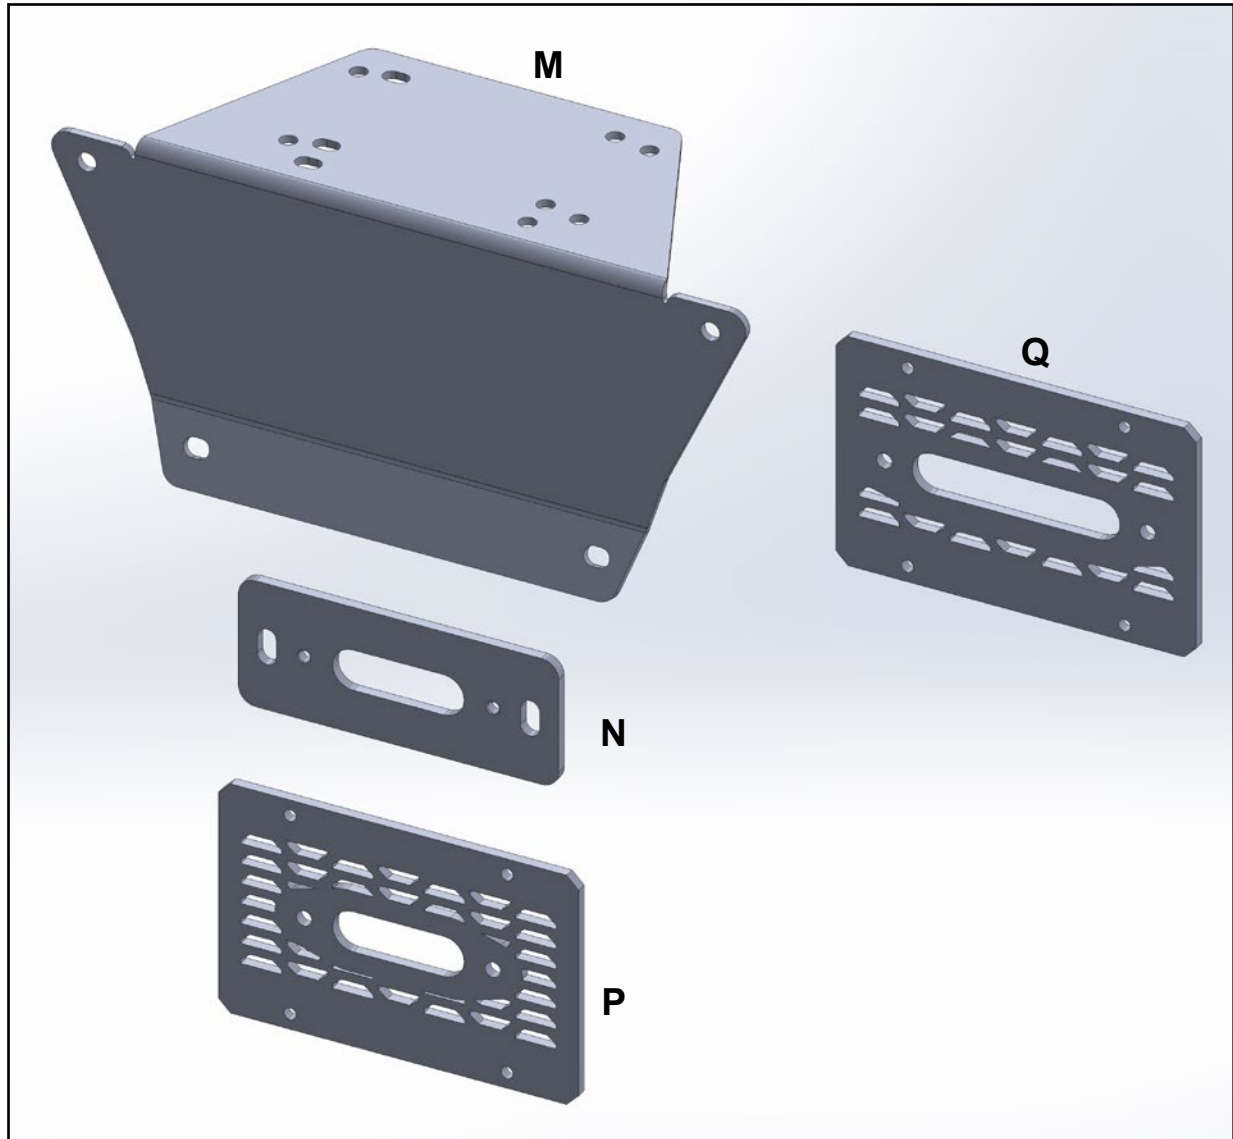


Winch Mount Plate Installation

Keep all components removed from machine.

Do not tighten hardware completely unless noted.

1. Remove Bumper from machine. See Fig. 1.
2. Install Winch to Winch Mount Plate (M); use hardware included with Winch. See Fig. 2.
3. Locate holes, shown in Fig. 3, and install Winch Mount Plate (M). See Figs. 3 - 3a.
 - Upper holes use M10-1.5 x 20mm Lg. Hex Flange Screws (A).
 - Lower holes use M10-1.5 x 20mm Lg. Hex Flange Screws (A) and M10-1.5 x 20mm Lg. Hex Flange Nylock Nuts (B).

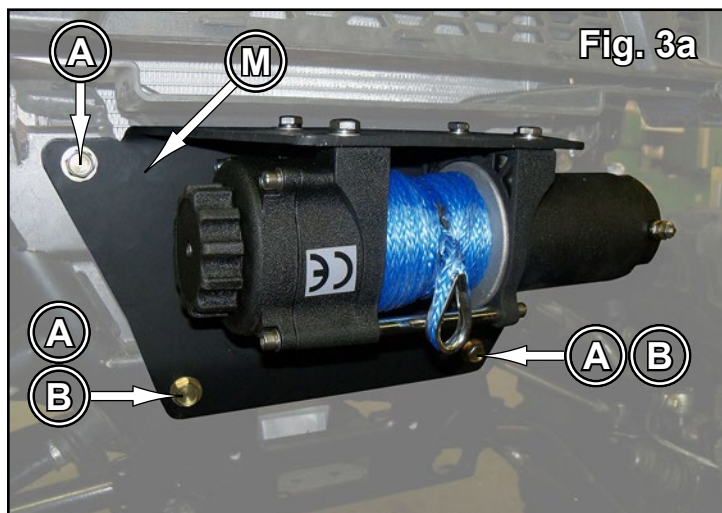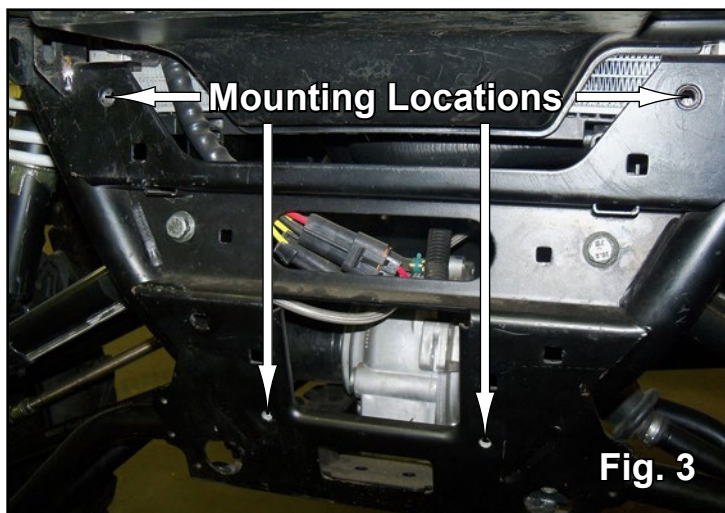




Determine which Fairlead to install and proceed to following pages.

(installation illustrations continue on following page)



Fairlead Installation with Stock Bumper

Do not tighten hardware completely unless noted.


1. Install Stock Bumper 3500 Fairlead Plate (N) to Bumper with M10-1.5 x 25mm Lg. Socket Head Screws (C), M10 Flat Washers (R), and M10-1.5 Nylock Nuts (D). See Figs. 1 - 1a.
2. Install Fairlead to Fairlead Plate; hardware and Fairlead are provided with Winch or use included hardware shown in Fig. 2.
3. Tighten all hardware and reinstall Bumper to machine.

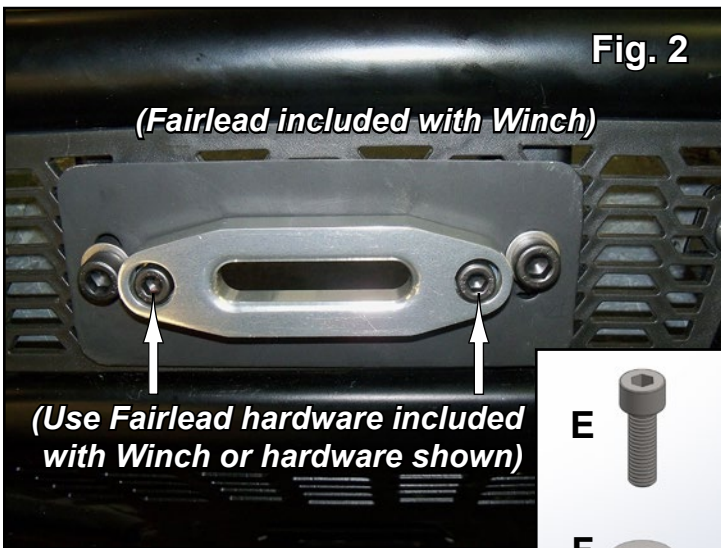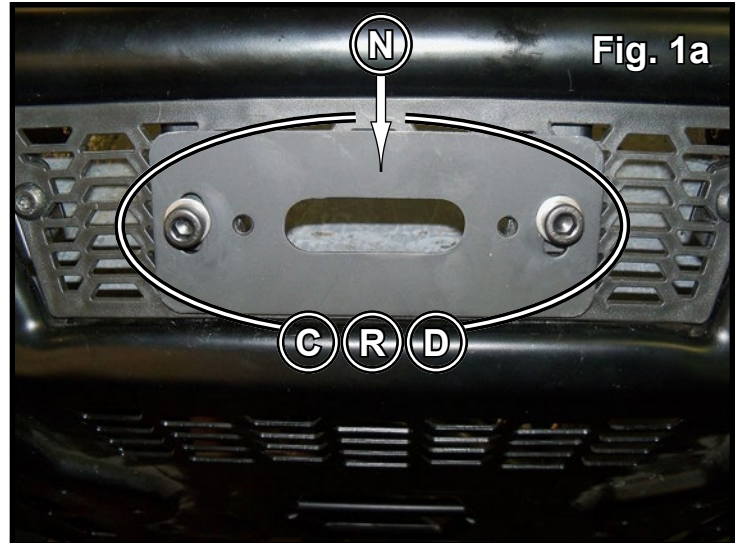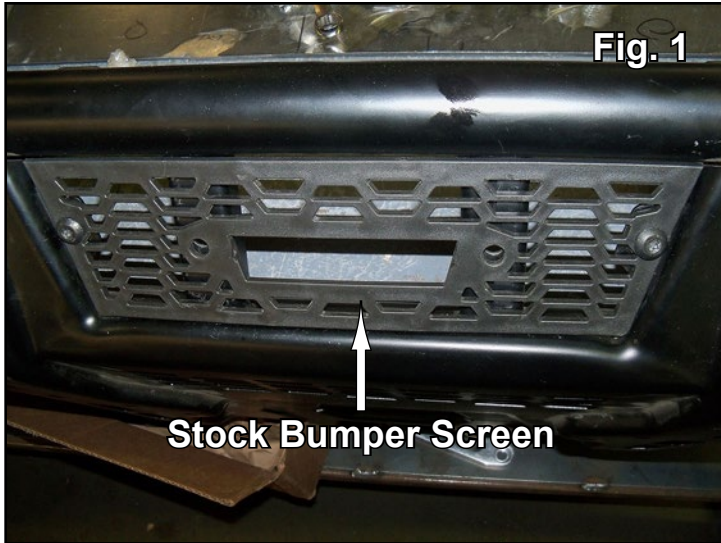

E	M8-1.25 x 25mm Lg. Socket Head Screws
F	M8 Flat Washers
G	M8 Lock Washers

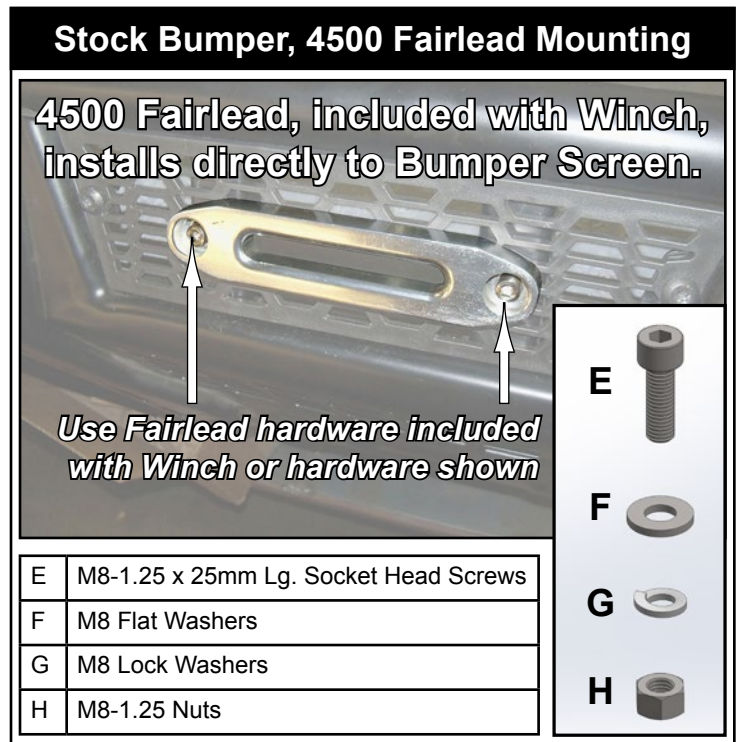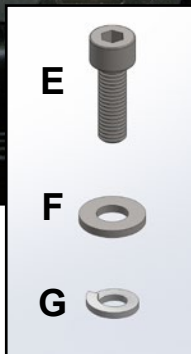

E	M8-1.25 x 25mm Lg. Socket Head Screws
F	M8 Flat Washers
G	M8 Lock Washers
H	M8-1.25 Nuts




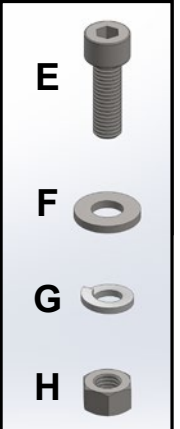


Fairlead Installation with SuperATV Front Brush Guard, FBG-P-RAN-09XP

Keep all components removed from machine.

Do not tighten hardware completely unless noted.

1. Remove Front Brush Guard from machine; remove Center Grille. See Fig. 1.
- Replace Side Grilles hardware with M6-1.0 x 20mm Lg. HHCS (J), M6 Flat Washers (K), and M6-1.0 Nylock Nuts (L). See Fig. 1a.
2. Install SuperATV 3500 or 4500 Fairlead Plate (P) or (Q) with M6-1.0 x 20mm Lg. HHCS (J), M6 Flat Washers (K), and M6-1.0 Nylock Nuts (L). See Fig. 2.
3. Install Fairlead to Fairlead Plate; hardware and Fairlead are provided with Winch or use included hardware shown in Fig. 3.
4. Tighten all hardware and reinstall Front Brush Guard to machine.

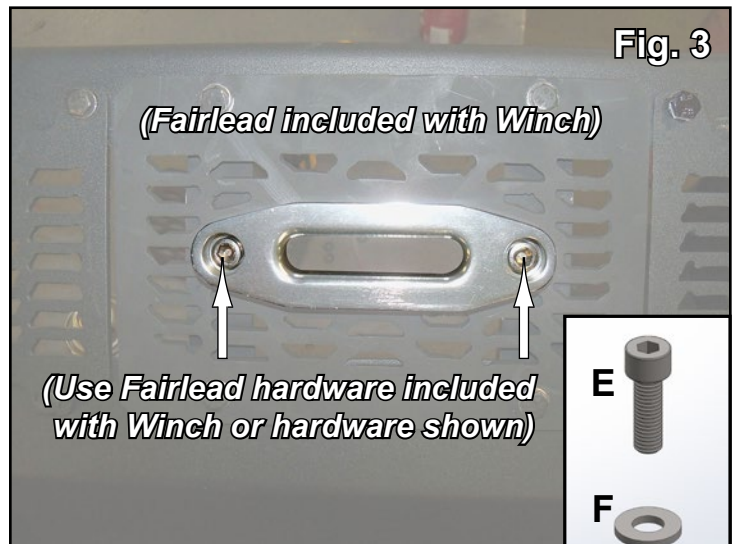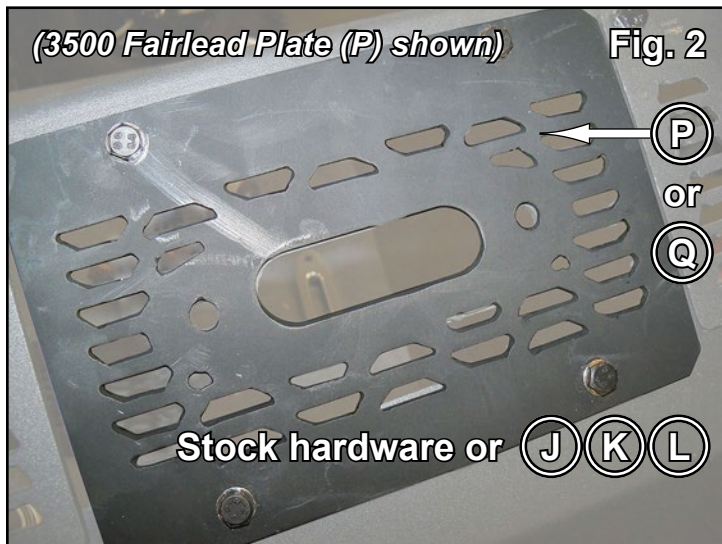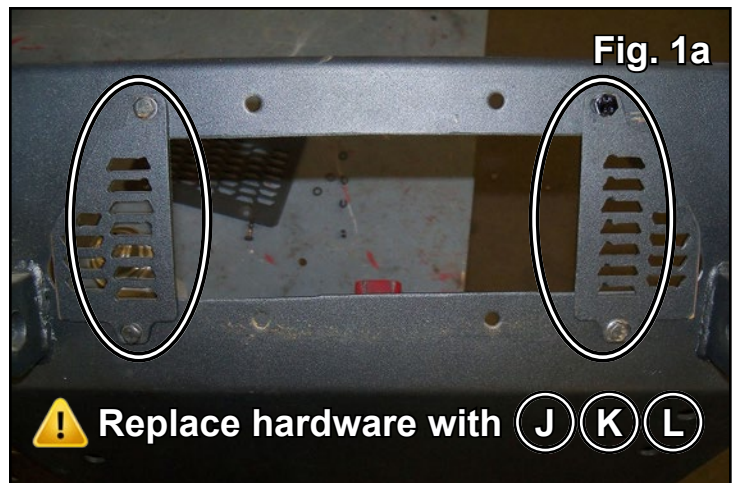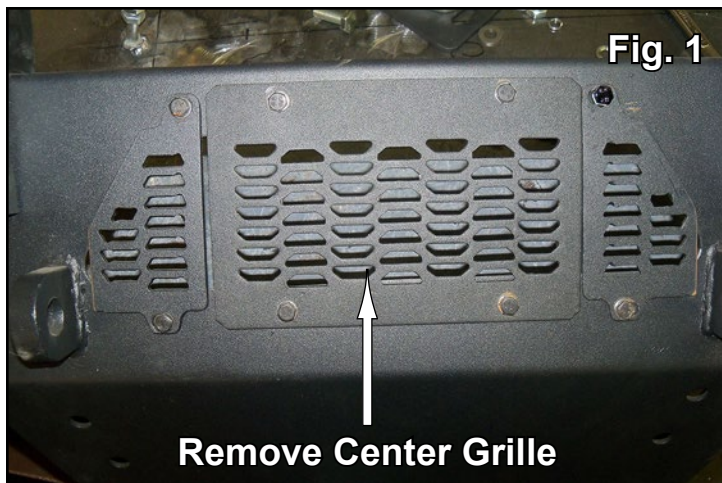

E	M8-1.25 x 25mm Lg. Socket Head Screws
F	M8 Flat Washers
G	M8 Lock Washers
H	M8-1.25 Nuts

