


Winch not included; shown for illustration only

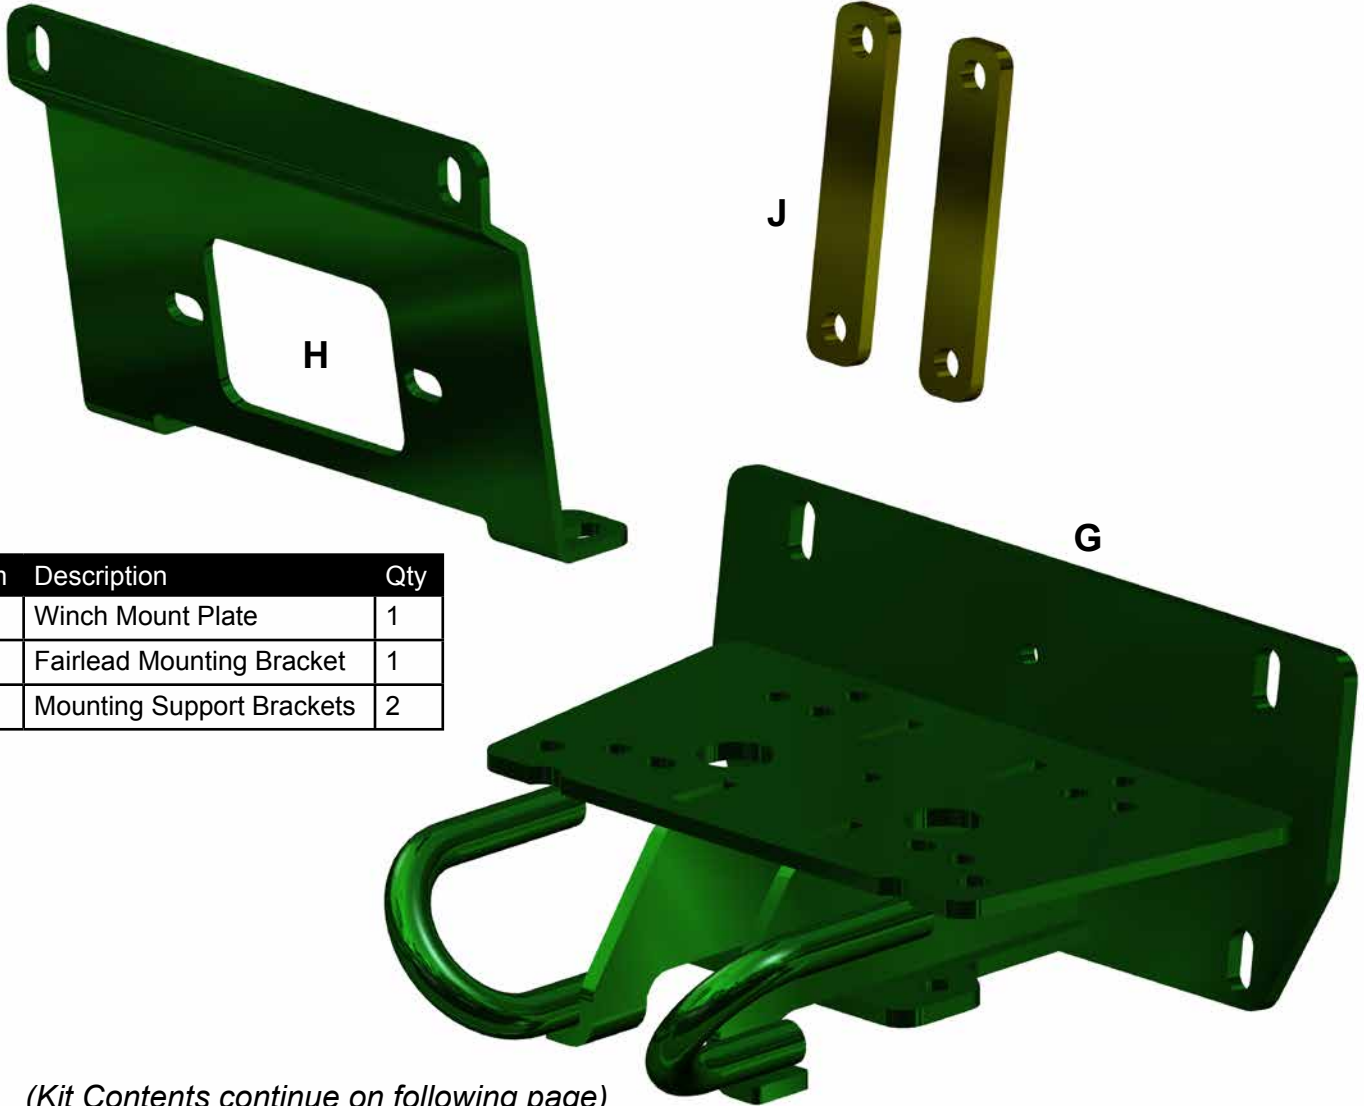

Item	Description	Qty
G	Winch Mount Plate	1
H	Fairlead Mounting Bracket	1
J	Mounting Support Brackets	2

(Kit Contents continue on following page)

Need help with your installation?

 sales@superatv.com
 www.superatv.com


 1-855-743-3427
  8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

*Thank You
 For Choosing*
SUPERATV.COM[®]

(Kit Contents continued)

Item	Description	Qty
A	M10-1.5 x 30mm Lg. Hex Flange Screws	10
B	M10-1.5 Hex Flange Nylock Nuts	10
C	M8-1.25 x 25mm Lg. SHCS	2
D	M8 Flat Washers	4
E	M8 Flat Lock Washers	2
F	M8-1.25 Nuts	2

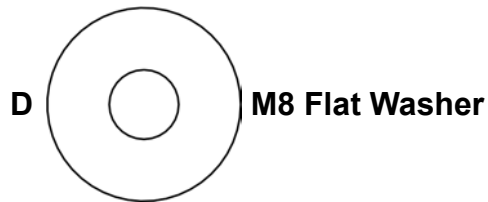

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.




Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.


The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.


Removal


Keep all components and hardware removed from machine.


1. If present, remove Front Brush Guard. See Figs. 1 - 1a.
2. Remove (4) Bolts from Front Plastic Trim. See Fig. 2.

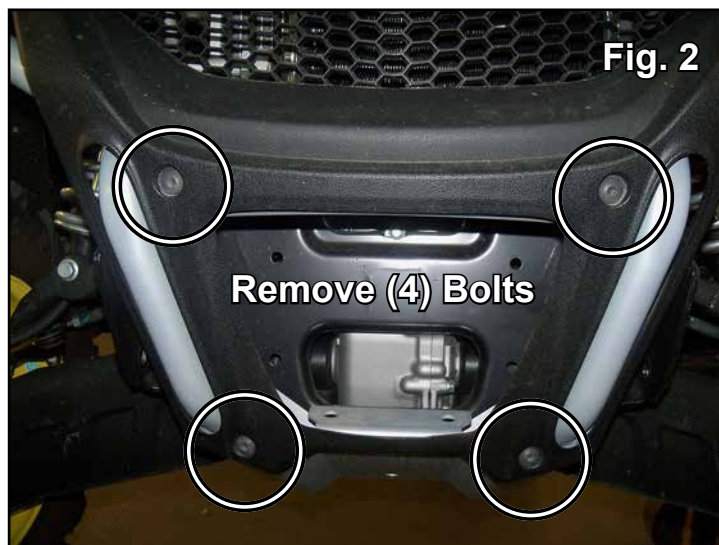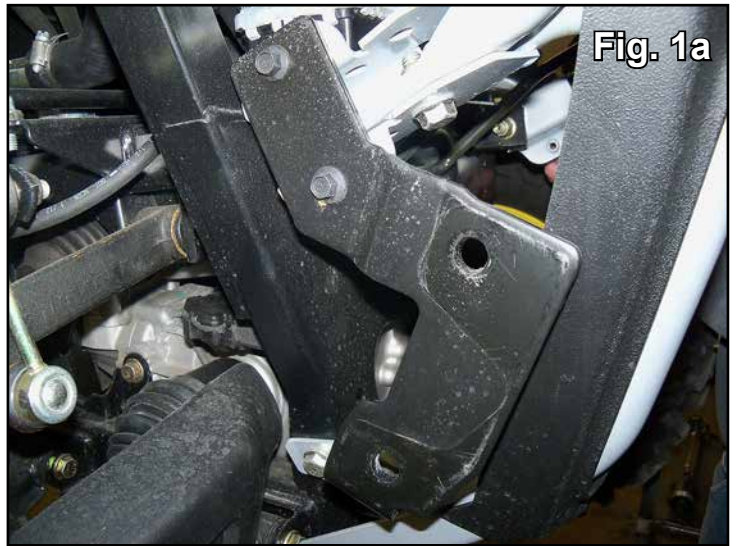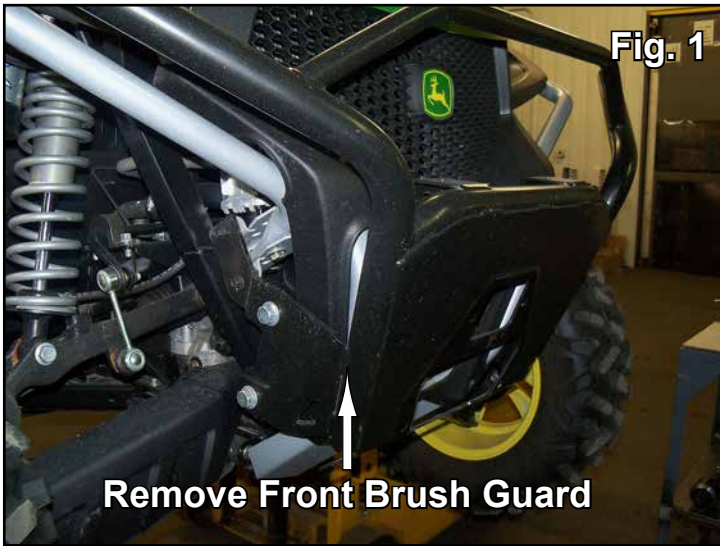

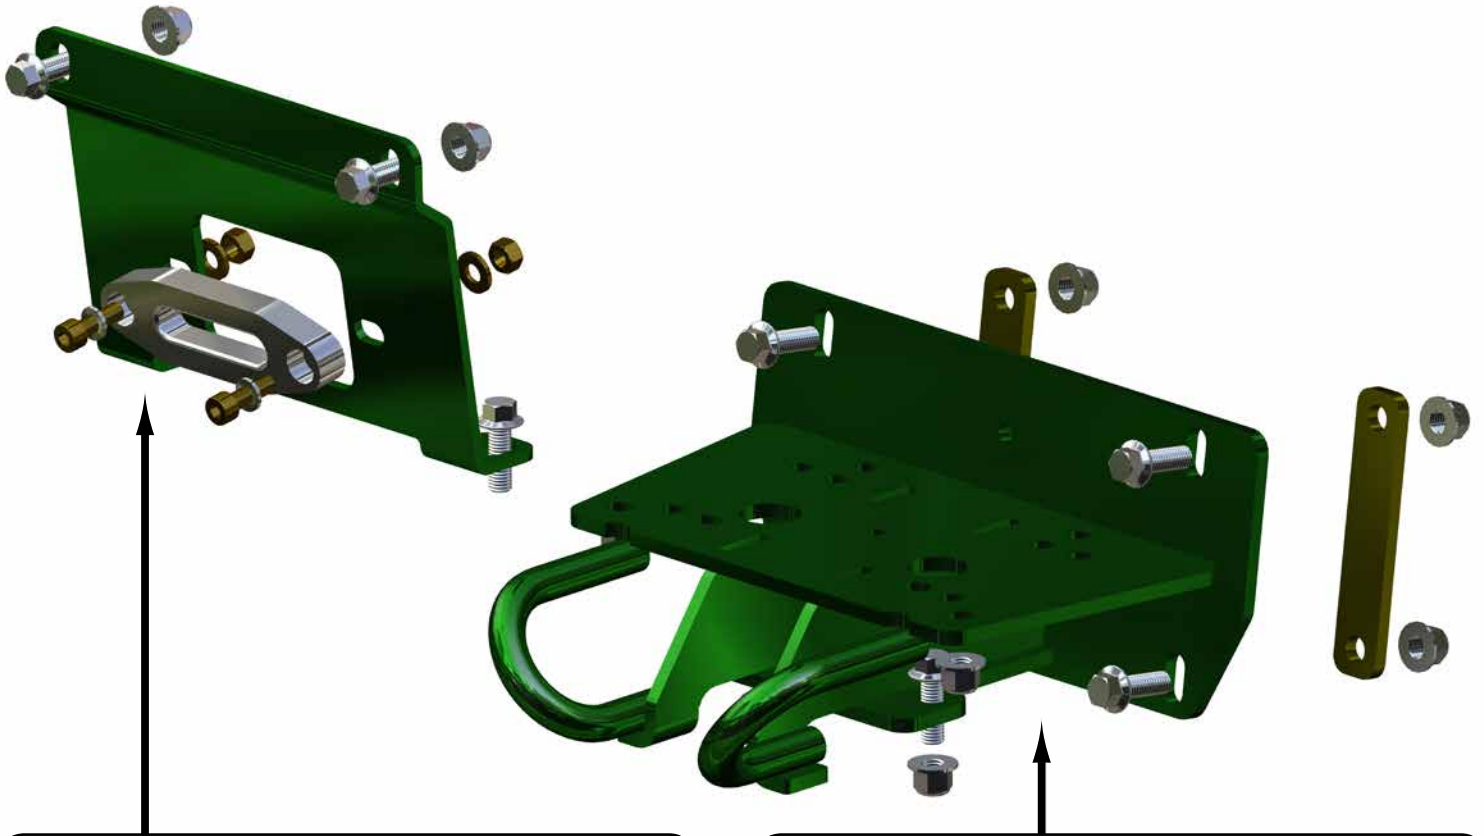
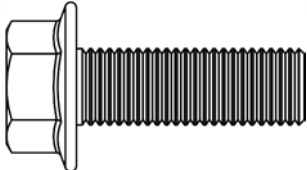



C  **M8 x 25mm Lg. SHCS**

E  **M8 Lock Washer**

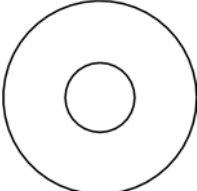D  **M8 Flat Washer**


F  **M8 Nylock Nut**

A  **M10 x 30mm Lg. HHCS**

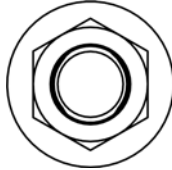B  **M10 Nylock Nut**



Installation: *Do not tighten hardware completely unless noted.*

1. Install Winch Mount Plate (G) to Bumper with M10-1.5 x 30mm Lg. Hex Flange Screws (A) and M10-1.5 Nylock Nuts (B). See Fig. 4.
- Install to machine with M10-1.5 x 30mm Lg. Hex Flange Screws (A) and M10-1.5 Nylock Nuts (B). See Fig. 5.
- Mounting Support Brackets (J) install behind Frame. See Fig. 5a.
- Use stock hardware to resecure Bumper to Frame.
2. Install Winch to Winch Mount Plate (G) with hardware supplied with Winch. See Figs. 6 - 6a.
3. Install Fairlead Mounting Bracket (H) to Winch Mount Plate (G) and Frame with M10-1.5 x 30mm Lg. Hex Flange Screws (A) and M10-1.5 Nylock Nuts (B). See Figs. 6 - 6a.
4. Go to Page 5 for Fairlead installation.
5. Reinstall necessary components.

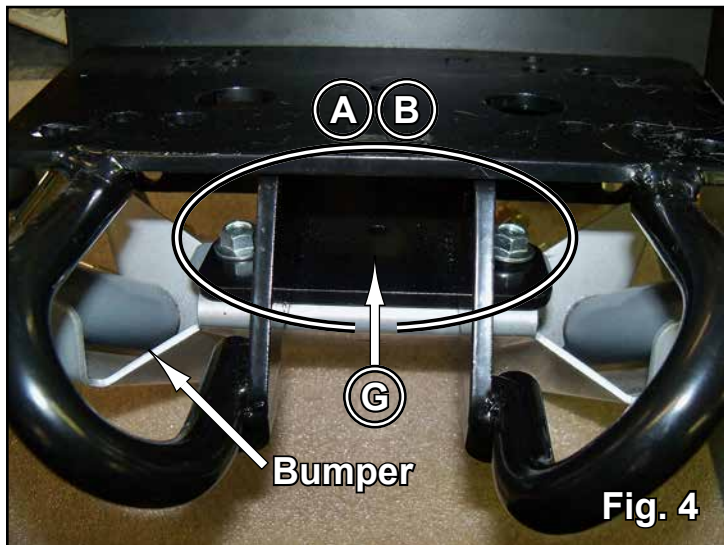




PARTS REFERENCE

Item	Description
A	M10-1.5 x 30mm Lg. Hex Flange Screws
B	M10-1.5 Hex Flange Nylock Nuts
C	M8-1.25 x 25mm Lg. Socket Head Screws
D	M8 Flat Washers
E	M8 Flat Lock Washers
F	M8-1.25 Nuts
G	Winch Mount Plate
H	Fairlead Mounting Bracket
J	Mounting Support Brackets

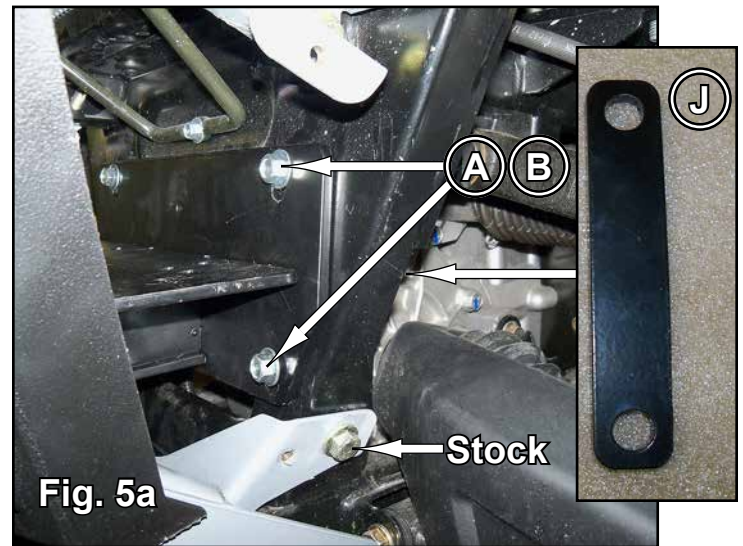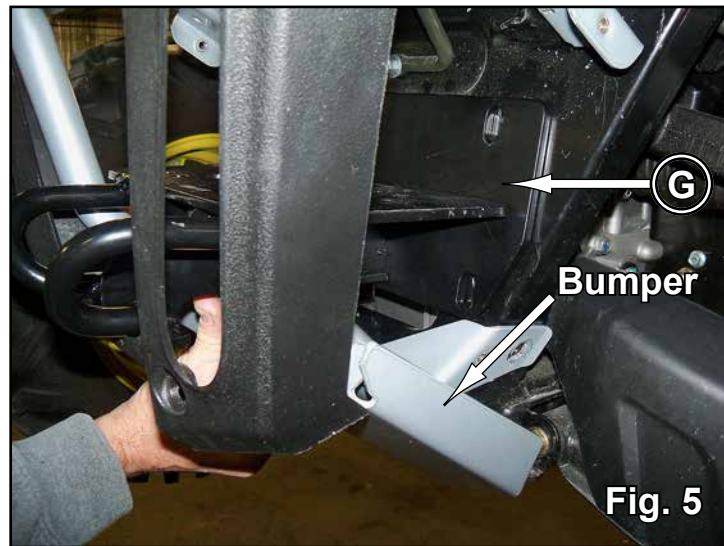

(installation illustrations continue on following page)

(installation illustrations continued)

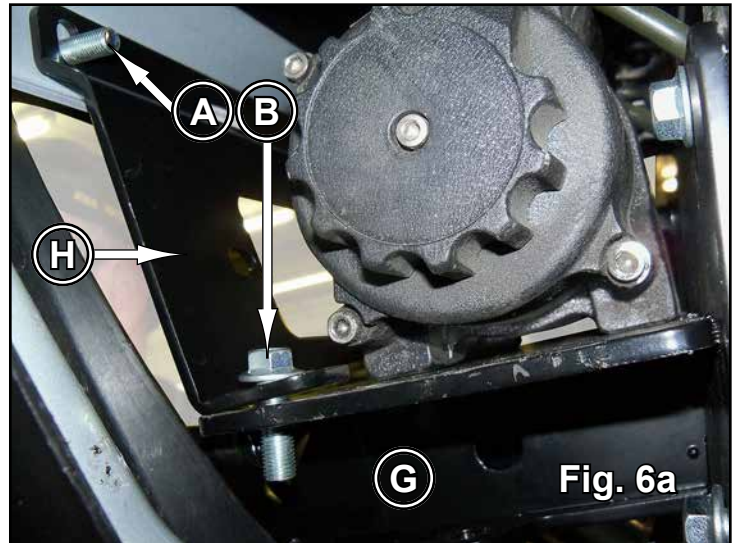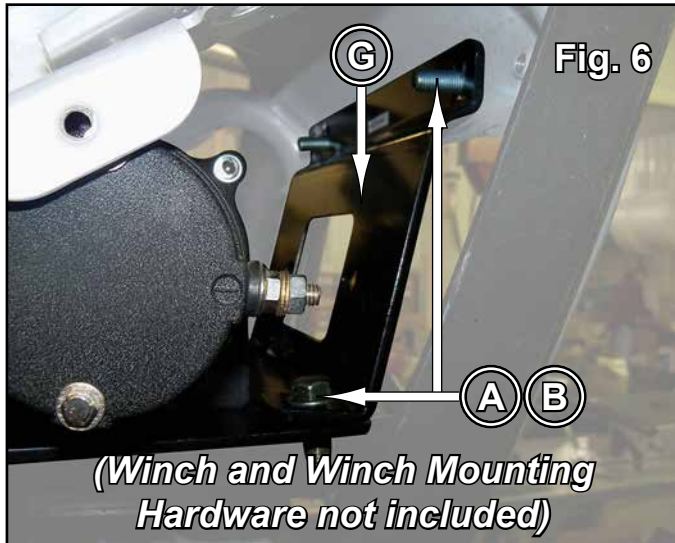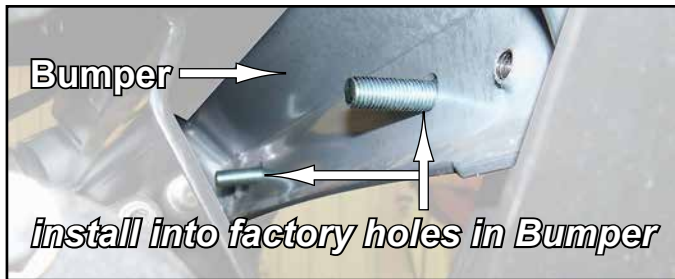

Fairlead Installation

1. Install Fairlead to Front Brush Guard if being used; hardware and Fairlead are provided with Winch or use included hardware shown in illustrations.
2. If Front Brush Guard is not being used, install Fairlead to Fairlead Mounting Bracket (H); hardware and Fairlead are provided with Winch or use included hardware shown in illustrations.

Mounting to Brush Guard

Use Fairlead hardware included with Winch or hardware shown

Fairlead provided with Winch

C	M8-1.25 x 25mm Lg. Socket Head Screws
D	M8 Flat Washers
E	M8 Flat Lock Washers
F	M8-1.25 Nuts

Mounting to Fairlead Mounting Bracket (H)

C	M8-1.25 x 25mm Lg. Socket Head Screws
D	M8 Flat Washers
E	M8 Flat Lock Washers
F	M8-1.25 Nuts

Fairlead provided with Winch