
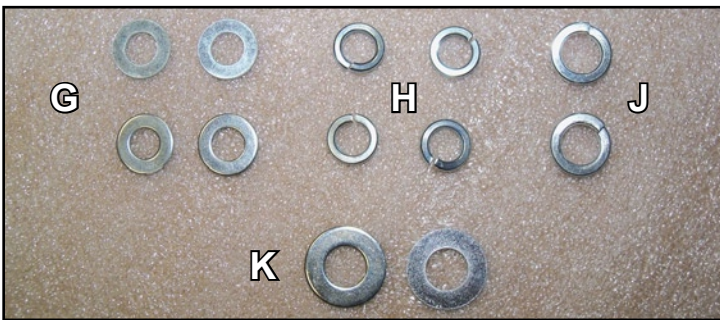
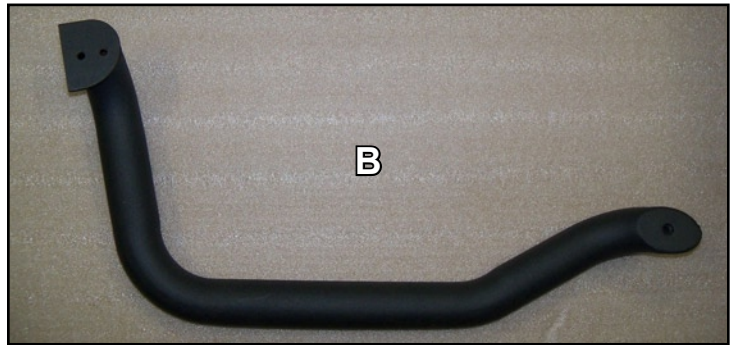


INSTALLATION INSTRUCTIONS

Polaris Ranger Curved Front Fender Protectors

Item	Description	Qty
A	Tube, Passenger Side	1
B	Tube, Driver Side	1
C	Brackets	2
D	M10-1.50 x 25mm Lg. HHCS	2
E	1/4-20 x 3/4" Lg. Self Tapping Screws	2
F	M8-1.25 x 25mm Lg. HHCS	4
G	M8 Flat Washers	4
H	M8 Lock Washers	4
J	M10 Lock Washers	2
K	M10 Flat Washers	2

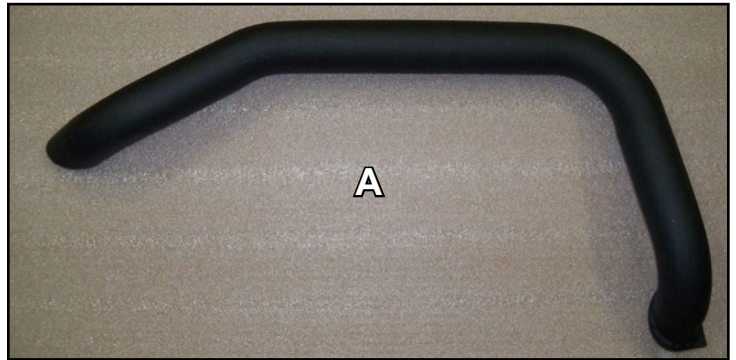

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*



Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

Do not tighten hardware completely unless noted.

1. Inside Wheel Well, towards fire wall, remove and keep, Torx hardware from machine. See Fig. 1.
2. Assemble Brackets (C) to ends of Tubes (A)(B). Secure with (2) each M8-1.25 x 25mm Lg. HHCS (F), M8 Lock Washers (H), and M8 Flat Washers (G). See Fig. 2.
3. Install to machine using Torx hardware removed in Step 1. Mark and drill, using #7 Drill Bit, and install 1/4"-20 x 3/4" Lg. Self Tapping Screw (E). See Fig. 3.
4. Repeat steps for opposite side.
5. Locate Tubes (A)(B) on Brush Guard and drill Ø7/16" hole into Brush Guard. See Fig. 4.
6. Attach Tubes (A)(B) to Brush Guard using M10-1.50 x 25mm Lg. HHCS (D) M10 Lock Washers (J), and M10 Flat Washers (K). See Fig. 5.
7. Tighten all hardware securely.

