
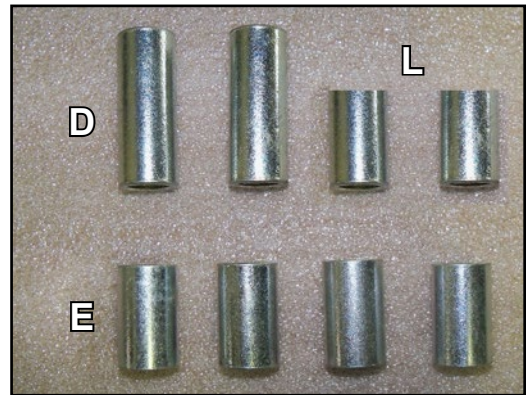
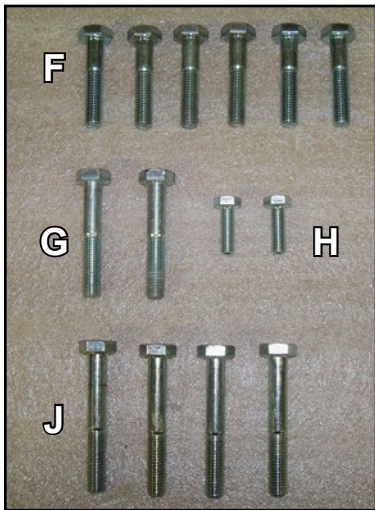
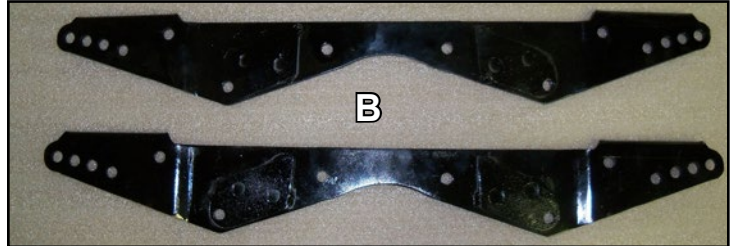


INSTALLATION INSTRUCTIONS

Polaris RZRS/RZR4 2"-3" Lift Kit

Item	Description	Qty
A	Front Bracket	1
B	Rear Brackets	2
C	Rear Bracket Support (Right)	1
D	Spacers, 44mm Lg.	2
E	Spacers, 29mm Lg.	4
F	M10-1.5 x 55mm Lg. HHCS	6
G	M10-1.5 x 60mm Lg. HHCS	2
H	M8-1.25 x 25mm Lg. HHCS	2
J	M10-1.5 x 70mm Lg. HHCS	4
K	M10-1.5 Nylock Nuts	12
L	Spacers, 24mm Lg.	2
M	Rear Bracket Support (Left)	1

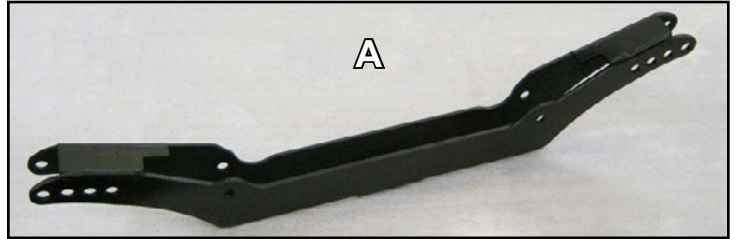

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*

Liability Statement

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

Do not tighten hardware completely unless noted.





FRONT

1. Raise front of machine off ground, secure with jack stands, and remove Wheels and Differential Vent Tube. Unbolt Shocks from frame and set hardware aside.
2. Install Front Bracket (A) to machine and secure with (2) each M10-1.5 x 55mm Lg. HHCS (F), M10-1.5 Nylock Nuts (K), and Spacers, 24mm Lg. (L). See Fig. 1 and Fig. 1a.
3. Determine desired lift and reinstall Shocks. Secure with stock hardware or M10-1.5 x 55mm Lg. HHCS (F) and M10-1.5 Nylock Nuts (K). See Fig. 1 and Fig. 1a.
4. Reinstall Wheels and tighten hardware completely.

REAR (Photos continue on page 3)

1. Raise rear of machine off ground, secure with jack stands, and remove Wheels. Unbolt Shocks from frame and set hardware aside.
2. Remove (2) bolts from factory Brace. Set hardware aside. See Fig. 2.
3. Install Rear Brackets (B) to machine and secure with (2) each M10-1.5 x 70mm Lg. HHCS (J), M10-1.5 Nylock Nuts (K), and Spacers, 44mm Lg. (D). See Fig. 3 and Fig. 3a.
4. Install Rear Support Brackets (C)(M) to Rear Bracket (B). Secure with (2) each M10-1.5 x 70mm Lg. HHCS (J), M10-1.5 x 60mm Lg. HHCS (G), M10-1.5 Nylock Nuts (K), and (4) Spacers, 29mm Lg. (E). See Fig. 3 and Fig. 3a.
5. Use factory holes, in frame, and attach Rear Support Brackets (C)(M). Reuse stock hardware or (2) M8-1.25 x 25mm Lg. HHCS (H). See Fig. 3a.
6. Determine desired lift and reinstall Shocks. Secure with stock hardware. See Fig. 4.
Optional: Install Short Spacers (E), M10-1.5 x 55mm Lg. HHCS (F), and M10-1.5 Nylock Nuts (K) in hole furthest from where Shock is mounted.
7. Reinstall Wheels and tighten hardware completely.

FRONT

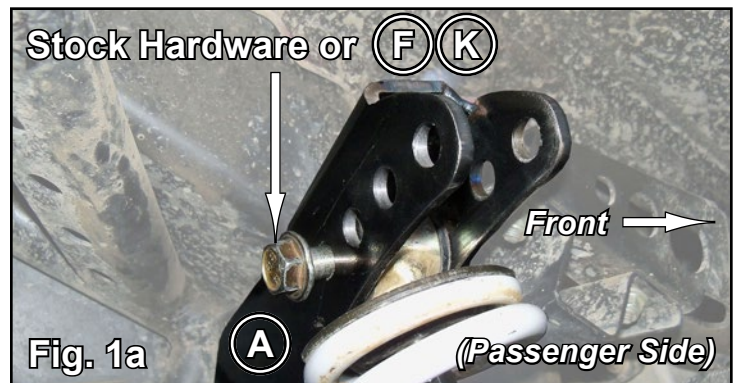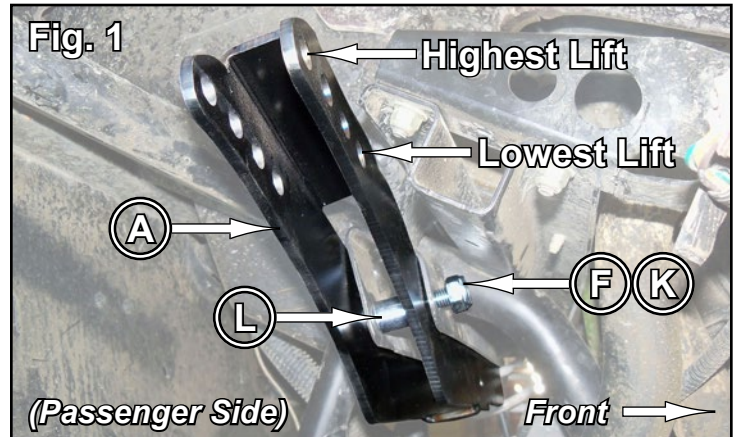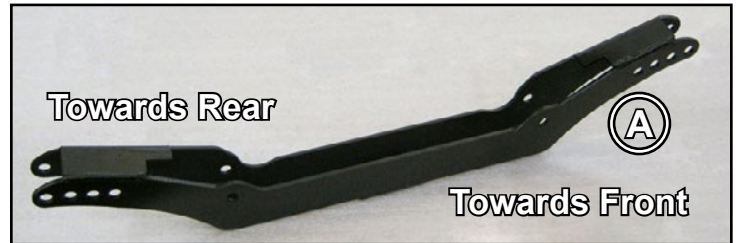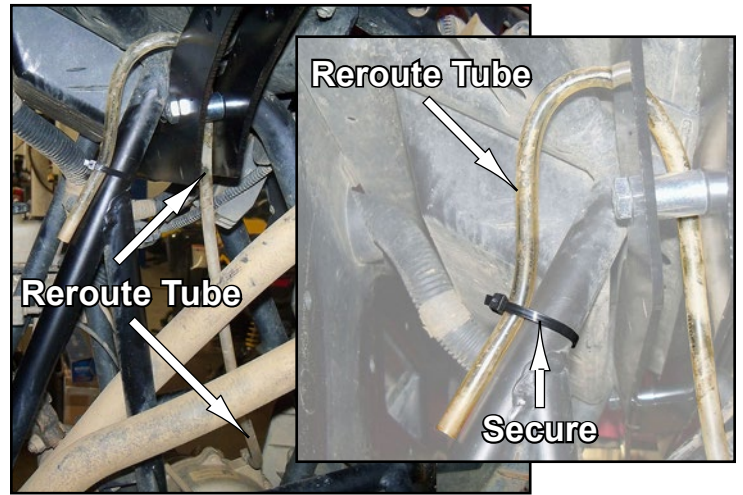

PARTS REFERENCE

Item	Description
A	Front Bracket
B	Rear Brackets
C	Rear Bracket Support (Right)
D	Spacers, 44mm Lg.
E	Spacers, 29mm Lg.
F	M10-1.5 x 55mm Lg. HHCS
G	M10-1.5 x 60mm Lg. HHCS
H	M8-1.25 x 25mm Lg. HHCS
J	M10-1.5 x 70mm Lg. HHCS
K	M10-1.5 Nylock Nuts
L	Spacers, 24mm Lg.
M	Rear Bracket Support (Left)

