


INSTALLATION INSTRUCTIONS
Polaris Ranger Plastic Roof

If installing on Bobcat 3400, modifications are required.

Item	Description	Qty
A	Roof Half (Passenger)	1
B	Roof Half (Driver)	1
C	Tube Clamps	8
D	M6-1.0 x 20mm Lg. PHMS	10
E	M6 Flat Washers	6
F	M6-1.0 Nylock Nuts	10
G	M6 Fender Washers	6

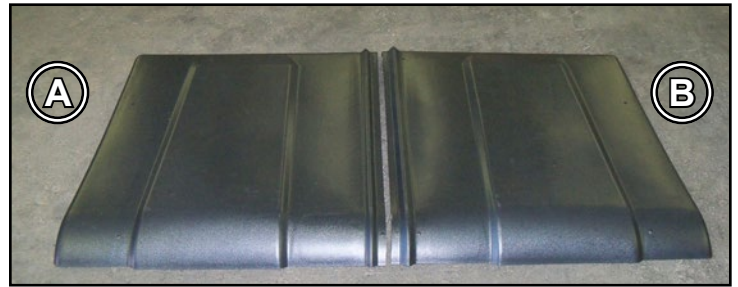

Read instructions and view illustrations before beginning.

Need help with your installation?

✉ sales@superatv.com 🌐 www.superatv.com

☎ 1-812-574-7777 🕒 8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Thank You
For Choosing
SUPERATV.COM

Liability Statement
 SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.



SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warranted if item was not installed properly, misused, or modified.

Do not tighten hardware completely unless noted.

1. Place Roof Half (B) on top of machine followed by Roof Half (A).




If installing on Bobcat 3400 models, proceed to page 3.

2. Place (8) Tube Clamps (C) around Roll Bar. Attach Roof (A)(B) to Tube Clamps (C) using (6) each M6-1.0 x 20mm Lg. PHMS (D), M6 Fender Washers (G), and M6-1.0 Nylock Nuts (F). See Fig. 1, Fig. 2, Fig. 2a, and Fig. 3. *Note: Center holes do not use Fender Washers.*
3. Tighten hardware completely.
4. Secure Roof Halves (A)(B) together with (2) each M6-1.0 x 20mm Lg. PHMS (D), M6 Flat Washers, and M6-1.0 Nylock Nuts.
5. Drill (2) Ø1/4" holes through Roof Halves (A)(B) and join together with (1) M6-1.0 x 20mm Lg. PHMS (D), (2) M6 Flat Washers, and (1) M6-1.0 Nylock Nut for each hole. See Fig. 4.

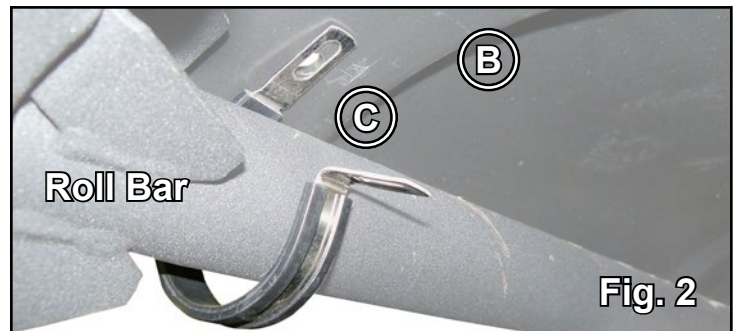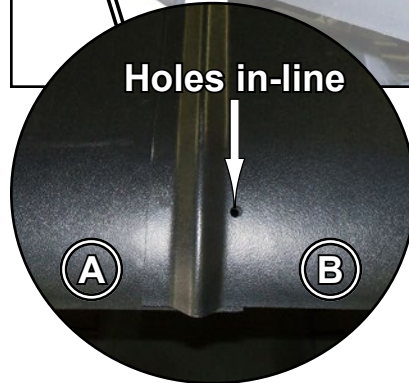



PARTS REFERENCE

Item	Description	Qty
A	Roof Half (Passenger)	1
B	Roof Half (Driver)	1
C	Tube Clamps	8
D	M6-1.0 x 20mm Lg. PHMS	10
E	M6 Flat Washers	6
F	M6-1.0 Nylock Nuts	10
G	M6 Fender Washers	6

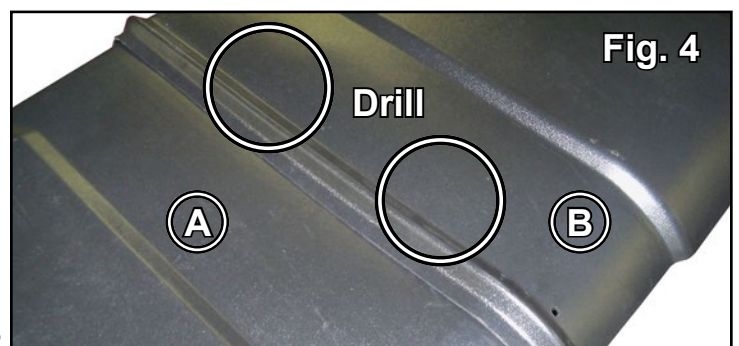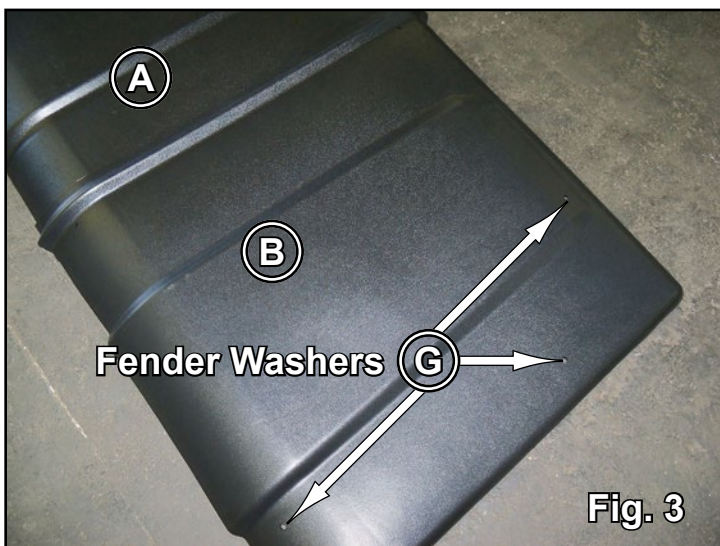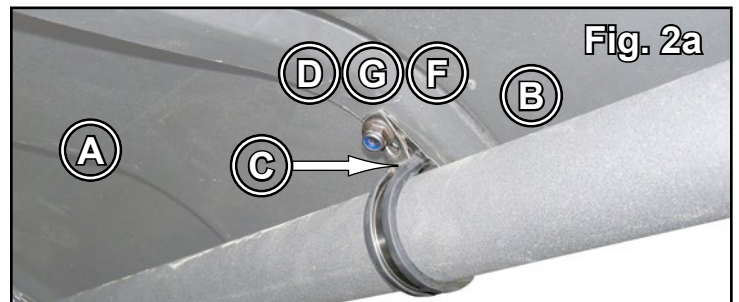

If installing on Bobcat 3400 models, forward mounting locations will require modification. See below.

1. Measure over, approximately 2" towards center of machine, from original mounting hole. Original front mounting locations will not work; Tube Clamps will interfere with Roll Bar.
2. Mark and drill new mounting hole. Repeat for opposite side.

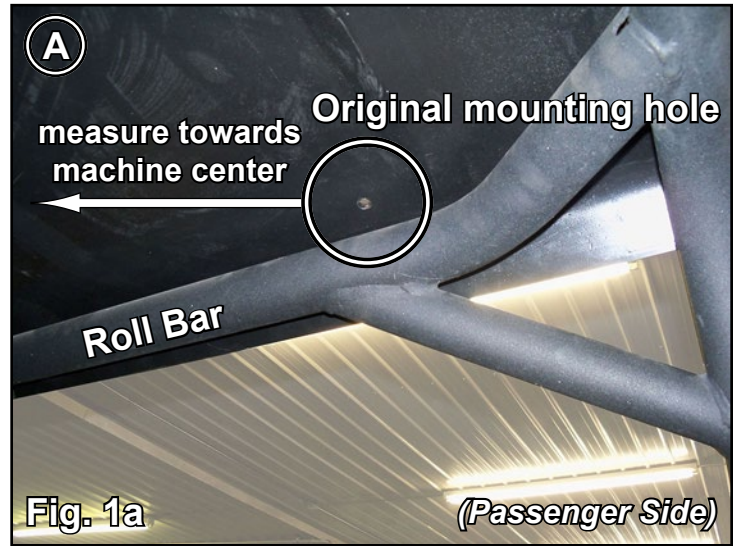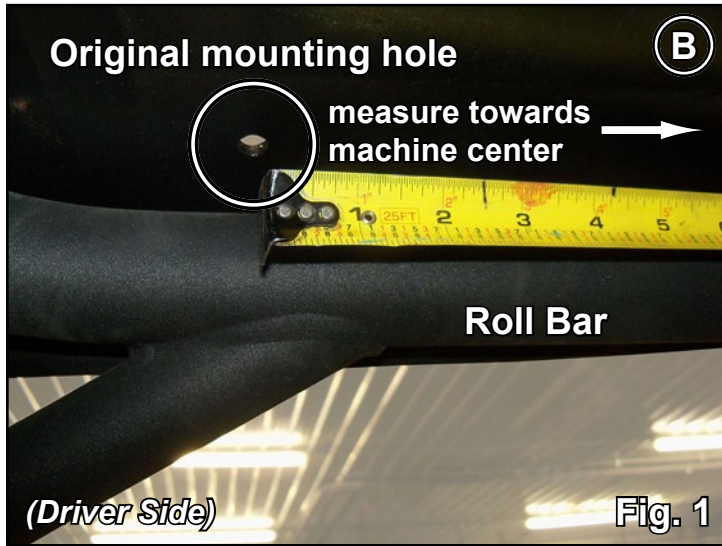

Return to Page 2, Step 2 to complete installation.

PARTS REFERENCE

Item	Description
A	Roof Half (Passenger)
B	Roof Half (Driver)
C	Tube Clamps
D	M6-1.0 x 20mm Lg. PHMS
E	M6 Flat Washers
F	M6-1.0 Nylock Nuts
G	M6 Fender Washers